



for a greener tomorrow



**MITSUBISHI
ELECTRIC**

Changes for the Better

FACTORY AUTOMATION

Energy-saving Data Collecting Server EcoWebServer III



Simple - Convenient - Compact

Realizing Energy

Visualization and Demand Management

EcoWebServer III

GLOBAL IMPACT OF MITSUBISHI ELECTRIC



Through Mitsubishi Electric's vision, "Changes for the Better" are possible for a brighter future.

Changes for the Better

We bring together the best minds to create the best technologies. At Mitsubishi Electric, we understand that technology is the driving force of change in our lives. By bringing greater comfort to daily life, maximizing the efficiency of businesses and keeping things running across society, we integrate technology and innovation to bring changes for the better.

Mitsubishi Electric is involved in many areas including the following

Energy and Electric Systems

A wide range of power and electrical products from generators to large-scale displays.

Electronic Devices

A wide portfolio of cutting-edge semiconductor devices for systems and products.

Home Appliance

Dependable consumer products like air conditioners and home entertainment systems.

Information and Communication Systems

Commercial and consumer-centric equipment, products and systems.

Industrial Automation Systems

Maximizing productivity and efficiency with cutting-edge automation technology.

OVERVIEW


System Configuration Example	P.4
Energy-saving Points	P.6
Features	P.8
EcoWebServerⅢ Usage	P.16
Lineup	P.22
Support terminal	P.23
Example screen	P.24
Application Examples	P.26
Main Unit Specifications	P.28
Connection Diagram	P.29
Function Comparison/System Environment	P.30
External Diagram/Bundled Products List	P.32
Related Products	P.33
Safety Precautions	P.34

Energy Management System

Energy-saving Data Collection Server EcoWebServer III


Support factory, building and school energy-saving activities.
Build visualized environments and manage energy effectively.
Support to energy conditions at all times and quickly resolve energy loss problems.
Finally reduce energy loss, increase productivity and cut production costs.

Energy-saving method

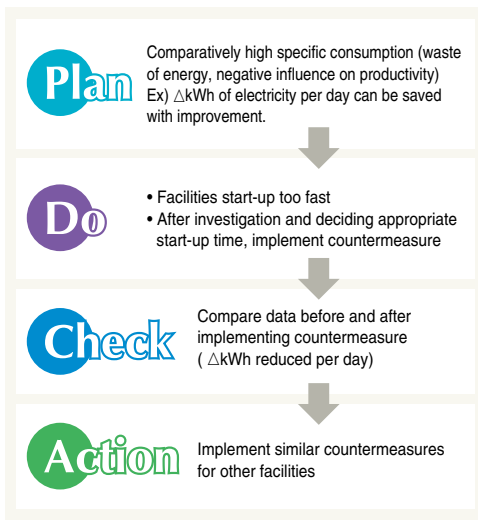



Support energy-saving activities using "Visible Management"

1. Monitor/Manage energy by department
2. Specific consumption-based management of energy-saving activities
3. Monthly/Annual target-based management
4. Monitor equipment operating status
5. Manage/Record energy data

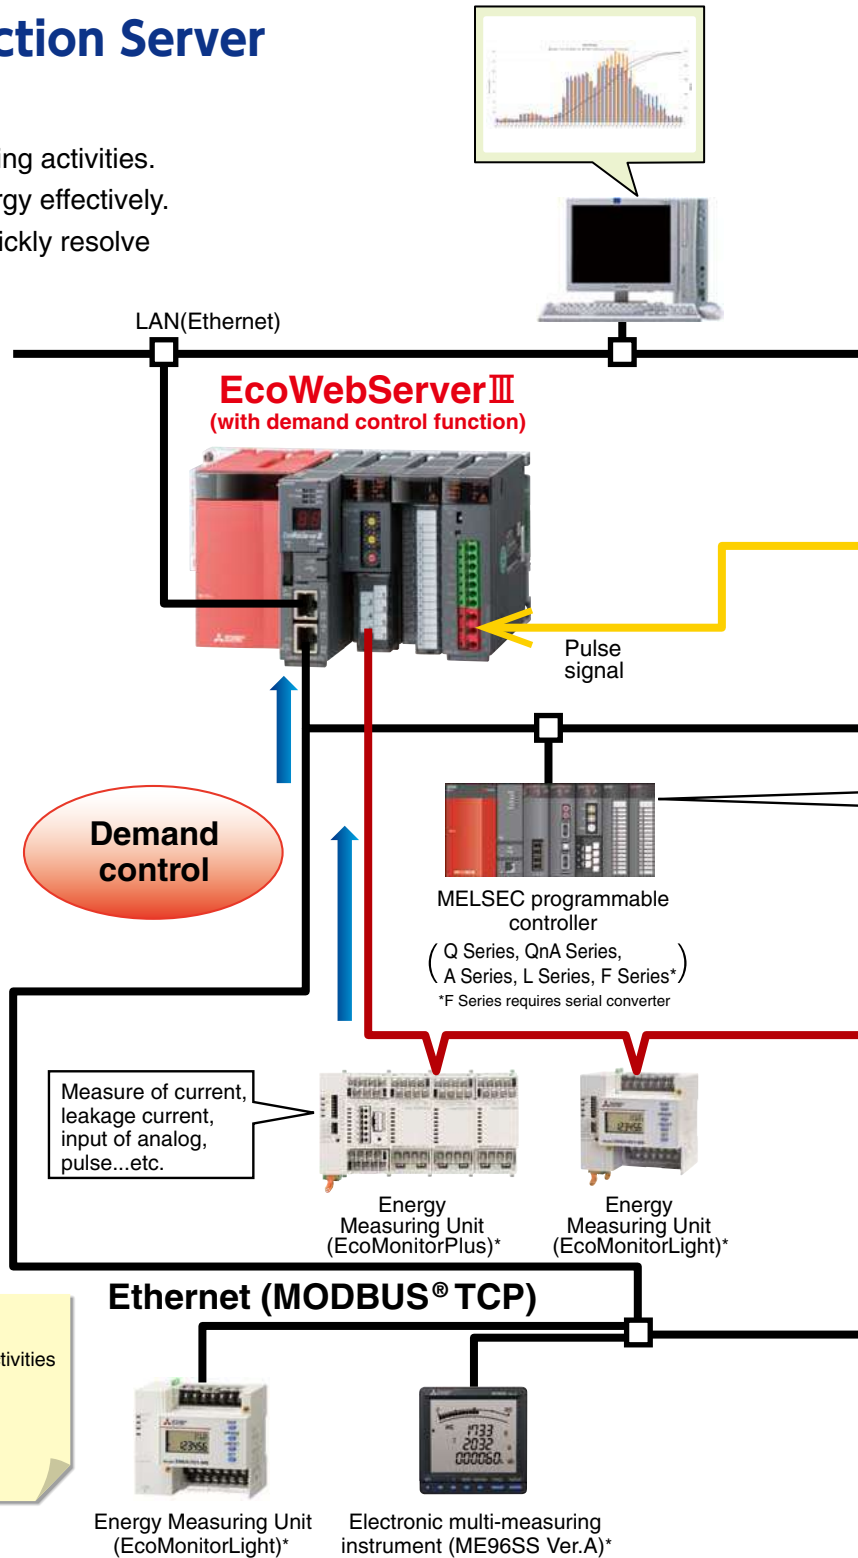

Entire factory

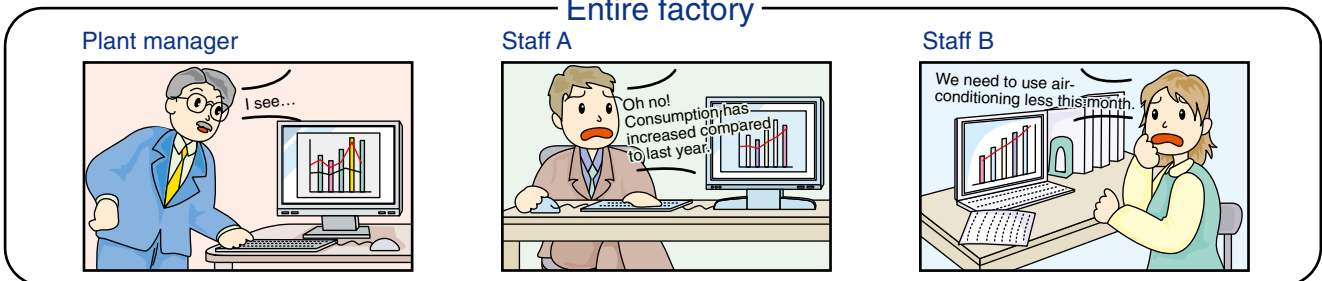

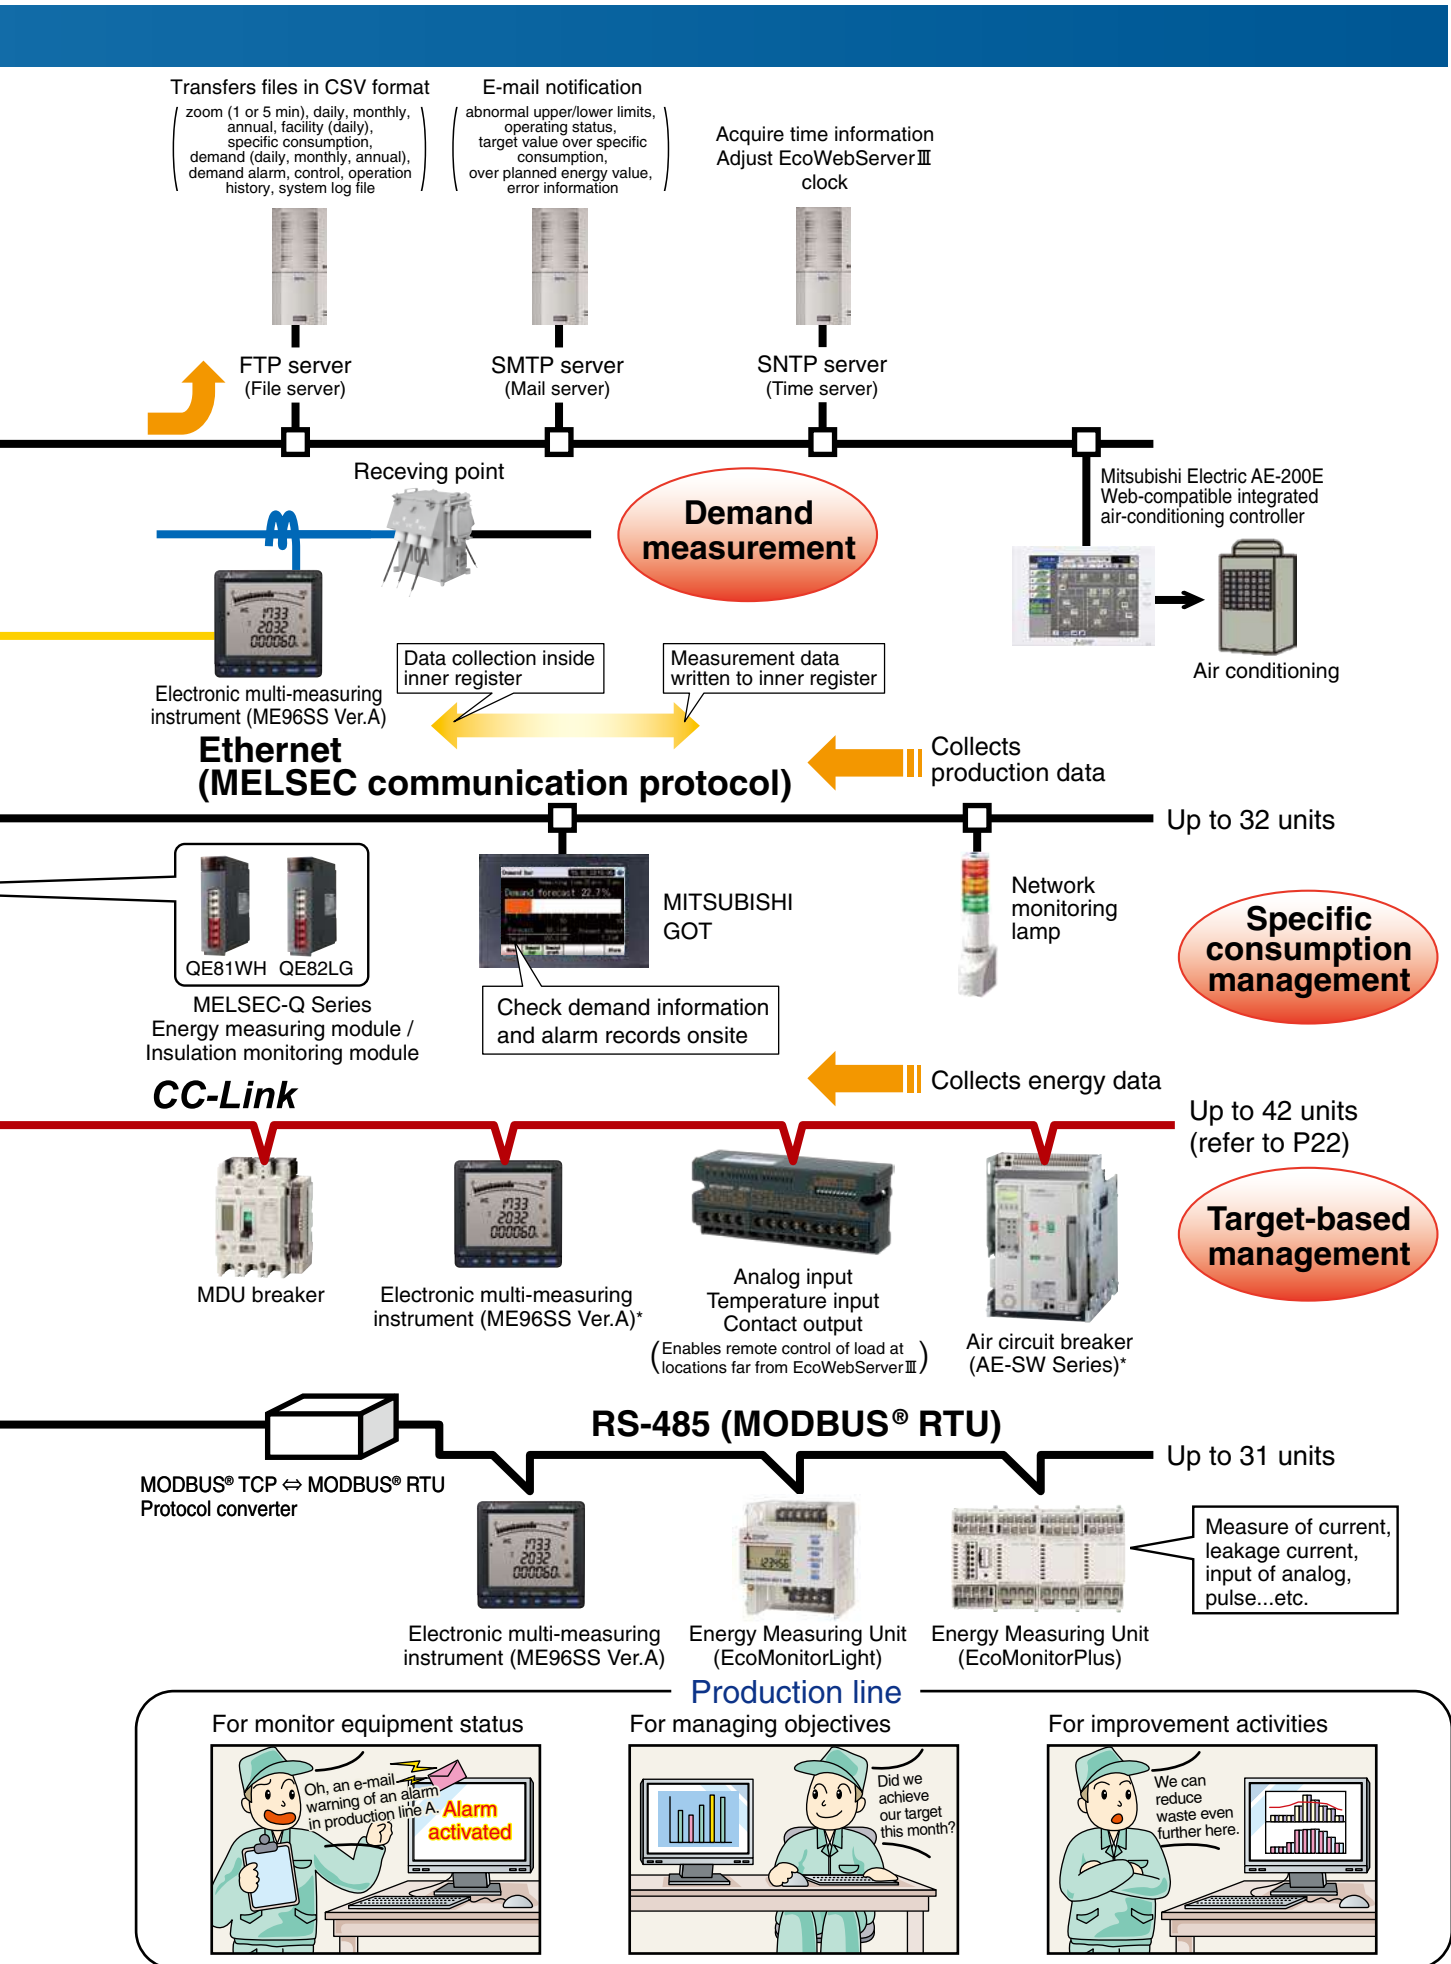

* It needs an optional unit to communicate with server.

Importance of visualizing energy

Essentials Issues for Saving Energy

Target Value Management

Managing objectives is a very important issue when practicing energy savings. “Target value management” is the process of transforming actual conditions into ideal conditions, and thereby requires understanding the actual situation and how much “unseen” waste there is. For this reason, target value management involves performing detailed management of operations, moving from months to days and lines to equipment, and evolving from “seeing” waste to “understanding” it. Additionally, when using target value management, it is necessary to construct and put into practice an organization that values “people who set objectives (manage),” “people who find things” and “people capable of thinking of improvements and implementing them.”


Target Value Management



Specific consumption management

In lines where there is a large difference in production volume, it is difficult to save energy and improve productivity using energy management alone. By understanding specific consumption —energy consumed per product— waste in energy and production processes can be clarified, and it becomes easier to implement countermeasures. Rather than simply not using energy, it’s important to use energy efficiently when, where and how much needed.

Specific consumption management

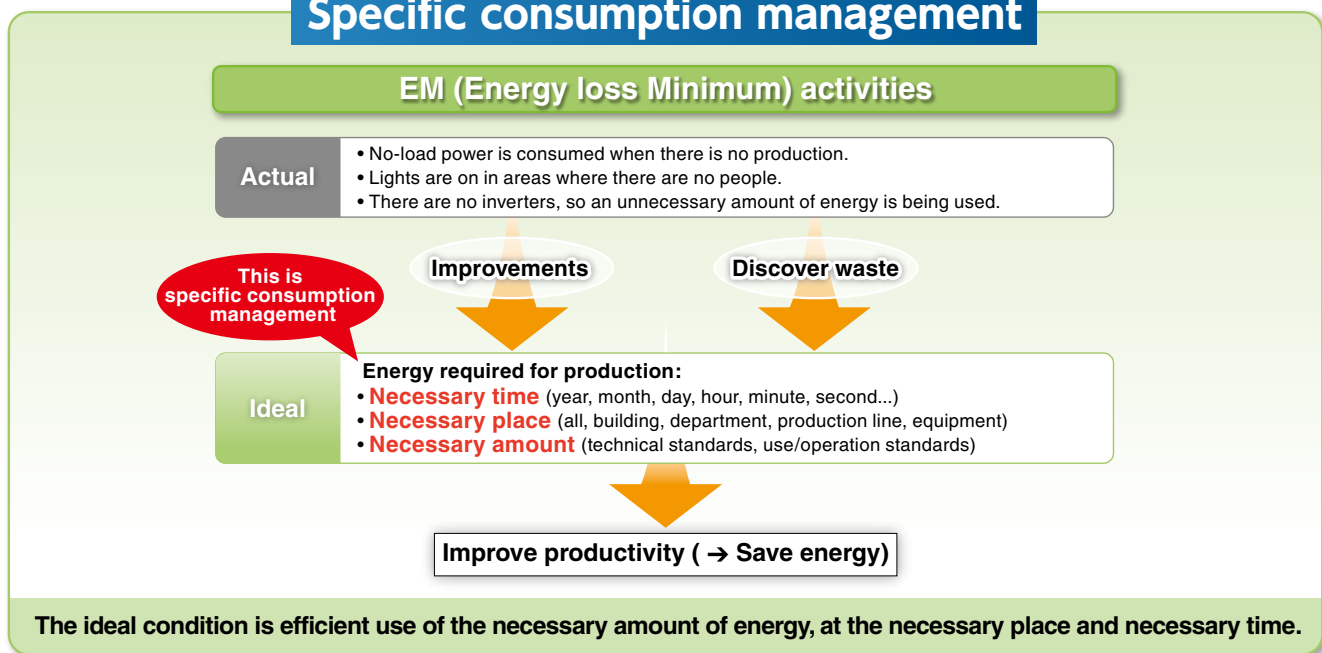

Importance of Demand Monitoring

Energy Saving by visualizing demand

What is "Demand"?

Demand is average electric power at a specified period. This period for demand differs for each country and the way of management method.

Electric fee is basically determined based on the highest demand in one year(→contract demand).

The higher the contract demand is, the more expensive the electric basic charge is.


There are two types of basic demand management method as below.

(2) Fixed block demand management method

The demand period consists of only an interval.

Fixed block demand management

Ex) Interval: 30min

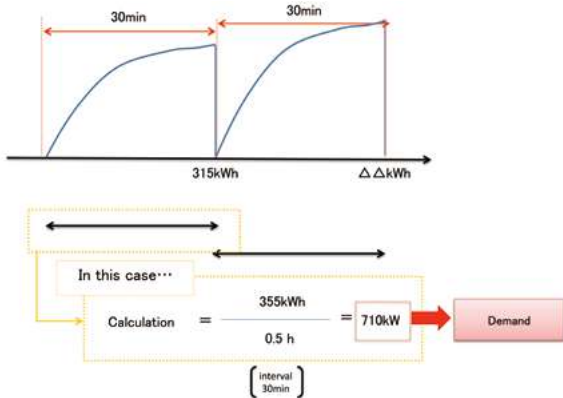

(2) Rolling block demand management method


The demand period consists of interval and sub interval.

Interval is the period for calculation of average electric.



Sub interval is the period for update the calculation.

Rolling block demand management method

Ex) Interval: 15min, Sub interval 5min

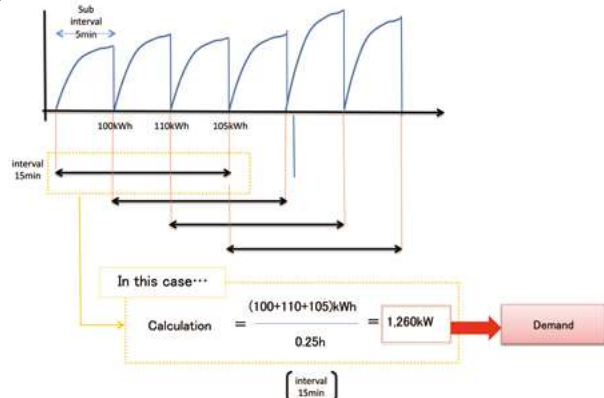

EcoWebServer III with demand monitoring function comply with the Fixed block demand management method. Interval can be selected from 15min or 30min or 1hour.

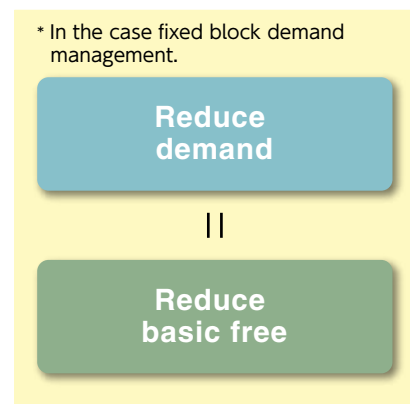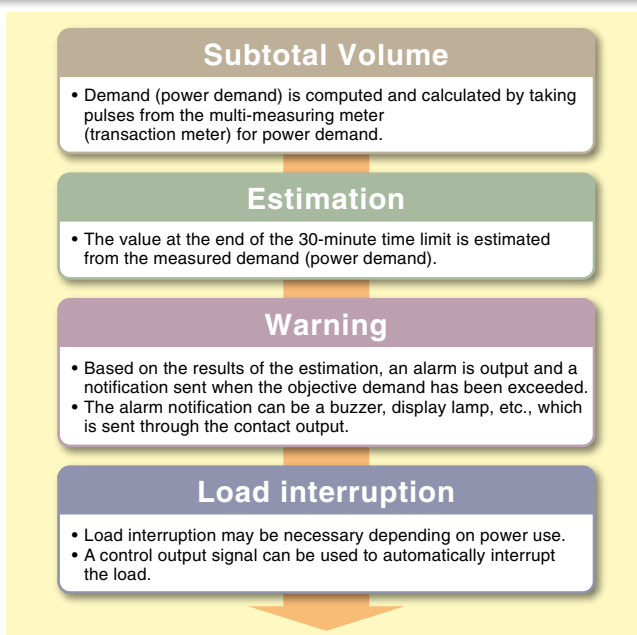


Realize visualization of energy and demand management with one EcoWebServer III.




1. Measured Data in Graphs on a Web Browser

- With built-in applications focused on energy saving (including graph functions), it is possible to contribute to energy-saving measures in plants.
- By HTTP server functions, the collected data is transmitted via Ethernet across the Intranet so that anyone in the network can check and grasp the energy usage in real-time.

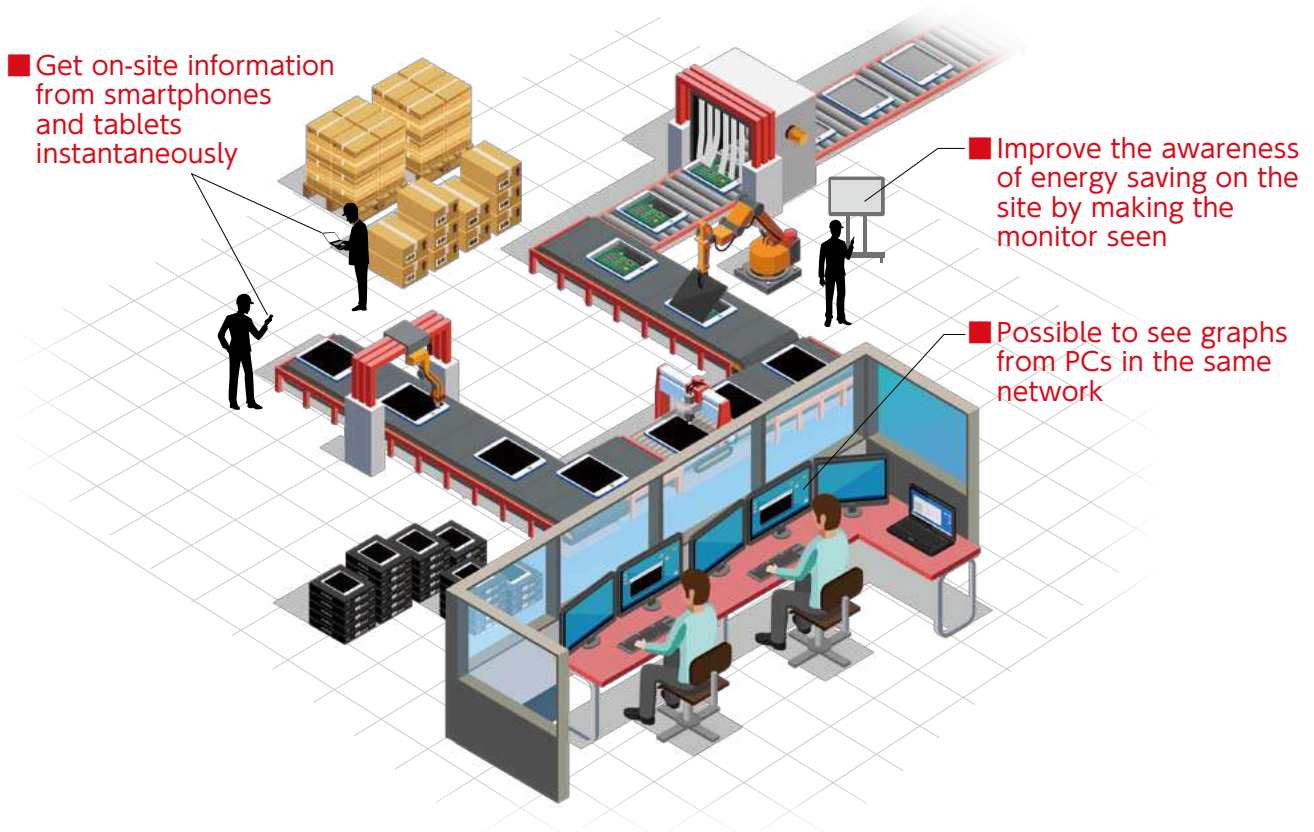

2. Smartphone and Tablet Supported

- It is possible to display graphs directly on a Web browser, so you can see the graphs from mobile terminals including smartphones and tablets as well as PCs.

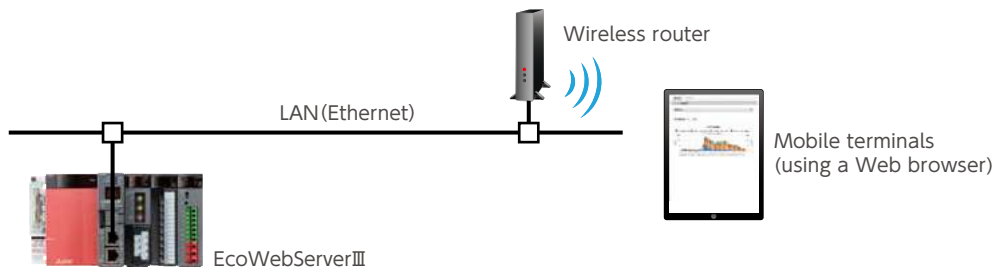

- In addition, the size and position of graphs are automatically adjusted to the window width of a Web browser and the screen size of a terminal, so now, you can see the screen adjusted to the terminal to use.



3. Easy Setting (programming less, ladder less)

- The minimum registration setting required for measurement is only:



Setting Process


1 Measuring Terminal Registration
 Select a terminal equipment to register to the lower rank in a pull-down system.



2 Measuring Point Registration
 Select measuring items (such as electric current, voltage and energy) in a pull-down system.



3 Project Writing
 Write the registered terminal and measuring point information to EcoWebServerIII.

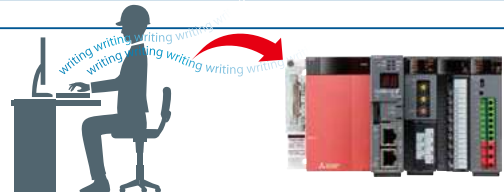

3 Writing the project

1 Measuring terminal registration

2 Measuring point registration

* The example screens and settings belong to MES3-255C-DM-EN.

4. Installed a variety of graphs for Energy-Saving Management


A variety of graph types and functions are built-in, so you can display graphs without drawing details.

■ Date Comparison Graph

- It is possible to select measuring items and comparison dates to display a graph instantly. You can identify abnormal values, which leads to improvement activities.

Also possible to display daily and monthly graphs

It is possible to display daily and monthly graphs, best suited to finding out a problem.

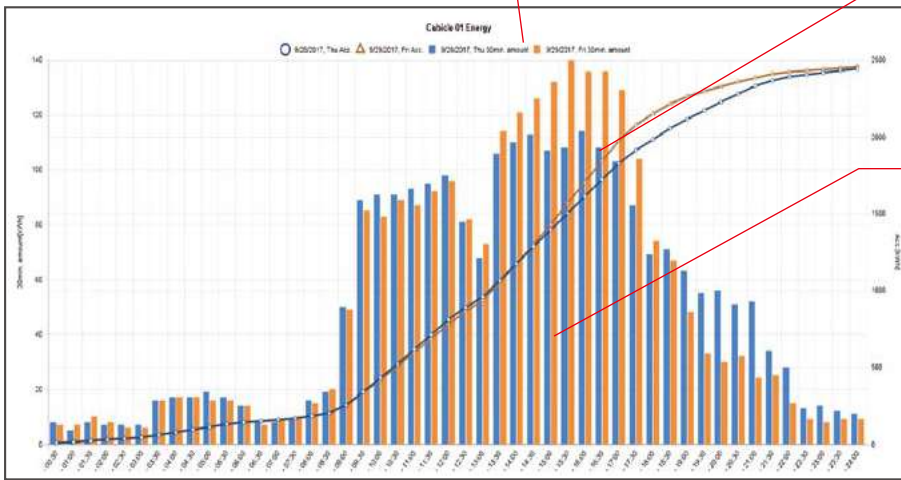

Visible difference from the date in comparison

The difference from the date in comparison is visible, so you can find out the cause immediately.


Possible to display tool tips

Put the mouse pointer on the graph, and you will be able to check the detailed values.



■ Measuring Point Comparison Graph

- It is possible to select measuring point groups and a date, and display a measuring point comparison graph instantly. You can identify the department with a greater effect provided by energy-saving measures, which leads to efficient activities.

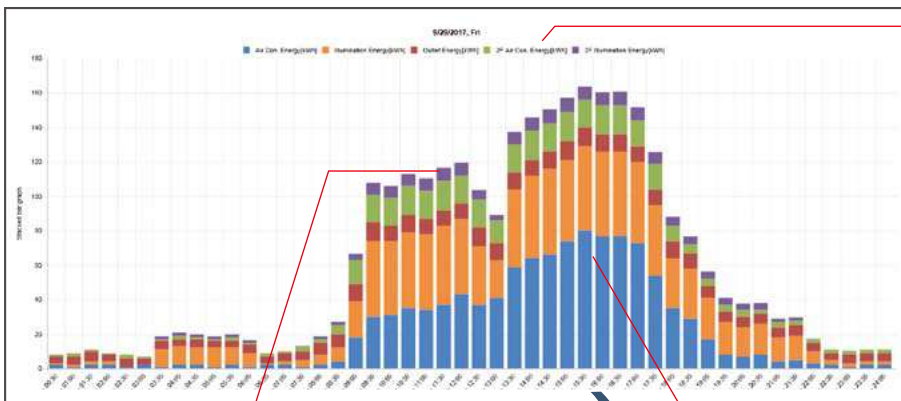


Possible to display up to 12 items

Up to 12 items can be displayed in a graph. It is possible to hide unnecessary items by a click, so you can select only necessary parts to display and make a comparison.

Possible to hide a legend by a click

By clicking a legend, you can hide unnecessary items.


Hide by a click!

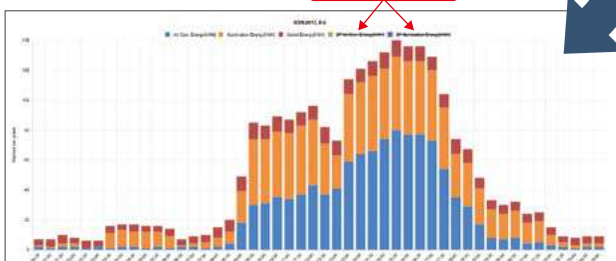

Possible to display more than one bar chart


It is possible to display parallel as well as stacked bar charts. You can use them for the comparison of energy usage in a same facility, and others.

Parallel bar charts

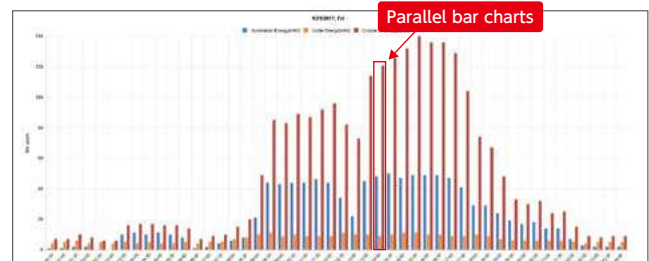

Specific Consumption Graph


- Configure the settings for a specific consumption graph, and a date comparison graph for specific consumption can be displayed instantly. Based on the graph, you can improve the management on the site, which leads to a productivity improvement (see p.18 and 19 for details).

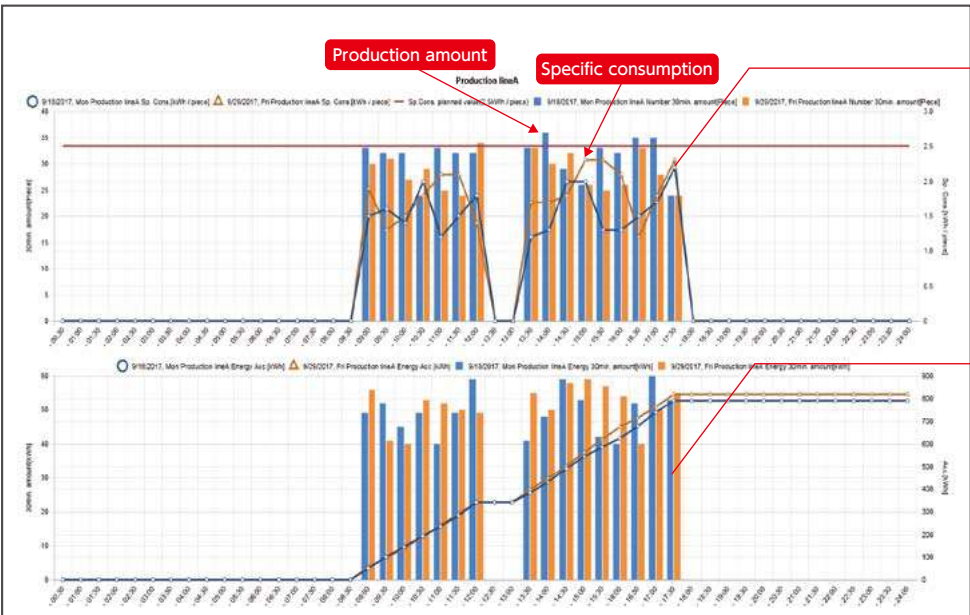


- Visible productivity**
It is possible to display specific consumption in a line graph and in a bar chart, so you can check the part where the productivity is lower at a glance.
- Easy to compare dates for facility energy usage**
At the same time with a specific consumption graph, a date comparison graph for the energy usage is displayed.

Demand Monitor (MES3-255C-DM-EN only)

- You can check the current condition and shift of demand at a glance.

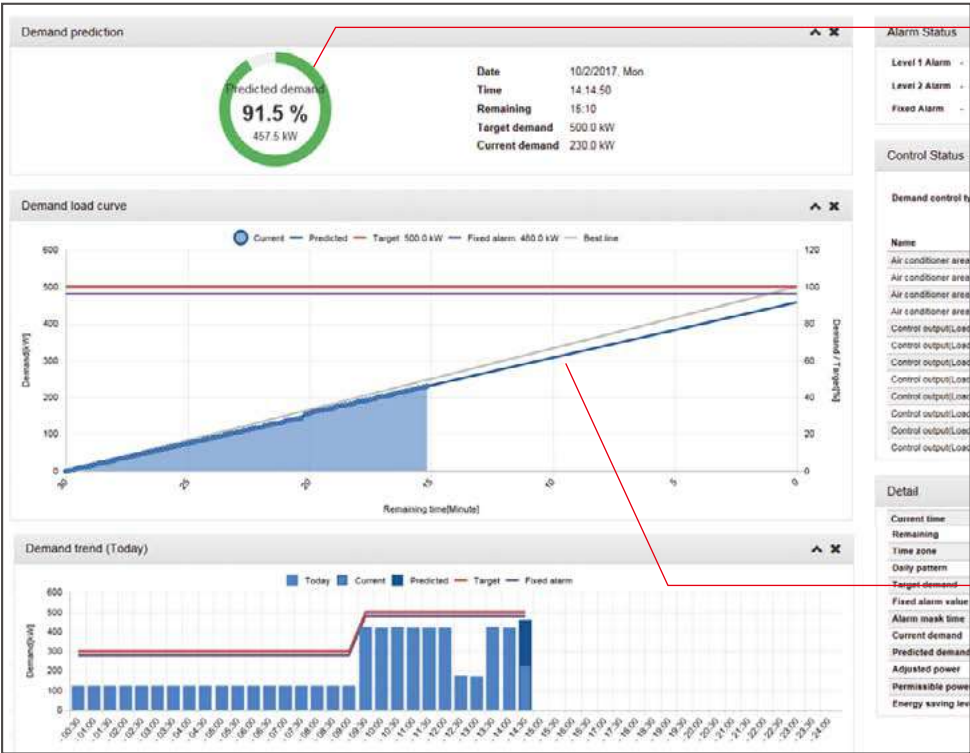


- Current demand condition monitor**
The demand value at the end of a 30-minute time limit is forecasted and displayed in a pie chart*. The color is changed according to the current demand condition, so you can check the condition at a glance.
- Demand load curve**
The load curve of the demand condition is displayed. You can check the demand condition relative to the target in a glance.

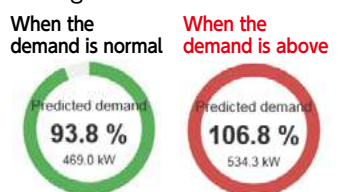

* Interval can be selected from 15min or 30min or 1hour.

5. It can be connected at MODBUS® RTU/TCP communication

- Using the LAN interface (CH2) of EcoWebServerIII, realize MODBUS® TCP communication.
(As with the case of MC protocol communication)
- Using the LAN CH2 of EcoWebServerIII, via MODBUS® TCP ⇔ MODBUS® RTU converter, realize MODBUS® RTU communication.*1

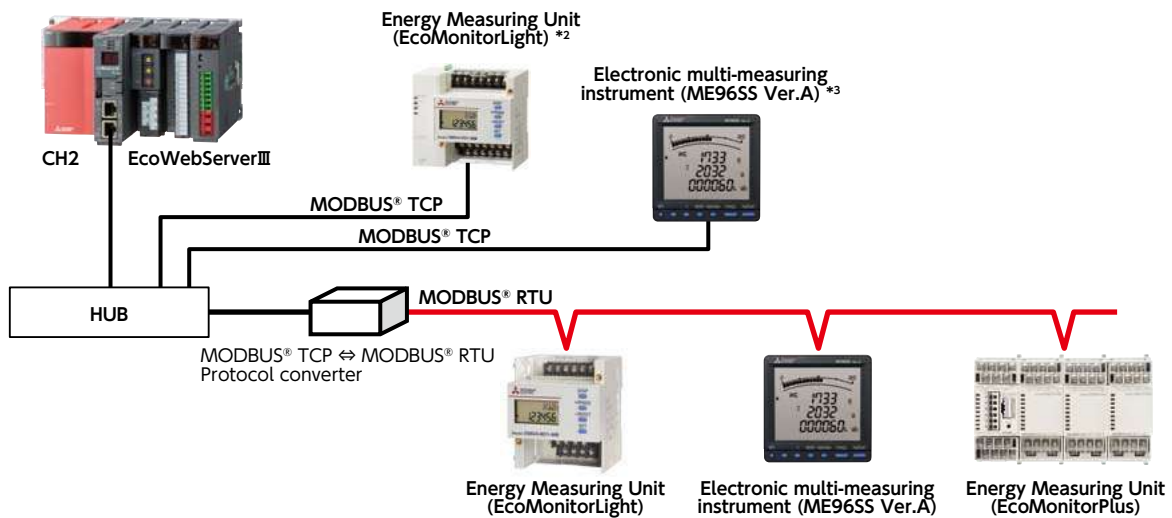


*1 MODBUS® TCP ⇔ RTU converter is required for MODBUS® RTU communication.
That has been functionally verified is SI-485 MB, SI-485 MB2 by LINEEYE CO., LTD.
*2 Only EMU4-FD1-MB can be connected and it needs an optional unit (Model name: EMU4-CM-MT)
*3 It needs an optional unit (Model name: ME-0000MT-SS96)

6. Detect Target Excess and Facility Abnormality Instantaneously by Alarm Output and E-Mail Notification

- It is possible to send an e-mail notification and an alarm output in case of the occurrence of target excess or facility abnormality, so you can catch a condition change at once. It is possible to accelerate the PDCA cycle from problem finding to measure taking and improve the productivity.
- Smartphones and tablets are supported, so you can check the alarm contents and e-mail notifications on the site.


Alarm Output/E-Mail Notification

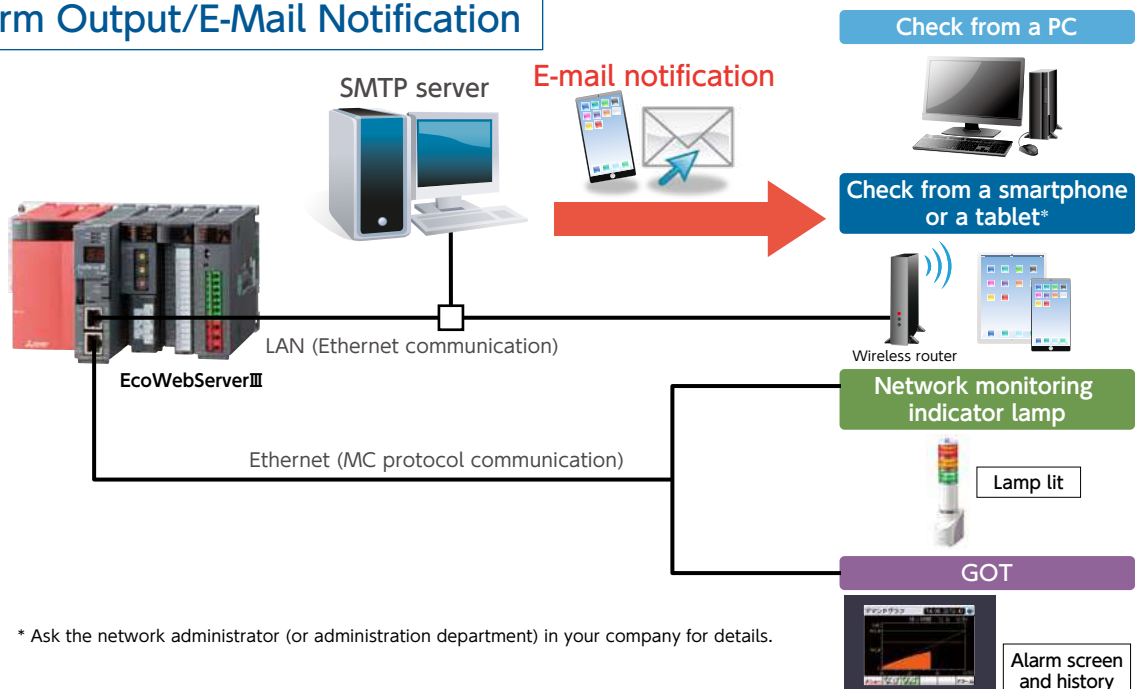

* Ask the network administrator (or administration department) in your company for details.


7. Specific Consumption Management in Coordination with a Mitsubishi PLC

- Based on production information in a Mitsubishi PLC and energy information in EcoWebServerIII, specific consumption is managed.
- The setting software dedicated to EcoWebServerIII enables to read the data in a Mitsubishi PLC easily.
- You can conduct detailed improvement activities for each facility, based on specific consumption data.

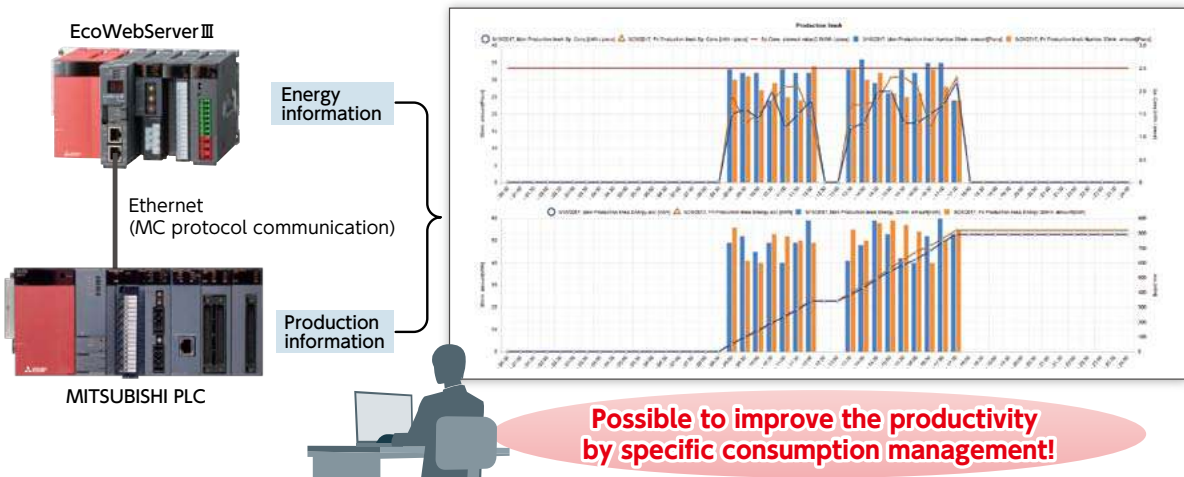

8. Connection with Mitsubishi Electric GOT display device.

- Information collected on the EcoWebServerIII can be displayed on the GOT.
- By displaying the alarm state/measuring value for energy information/demand, real-time monitoring at the site and urgent countermeasures are possible.

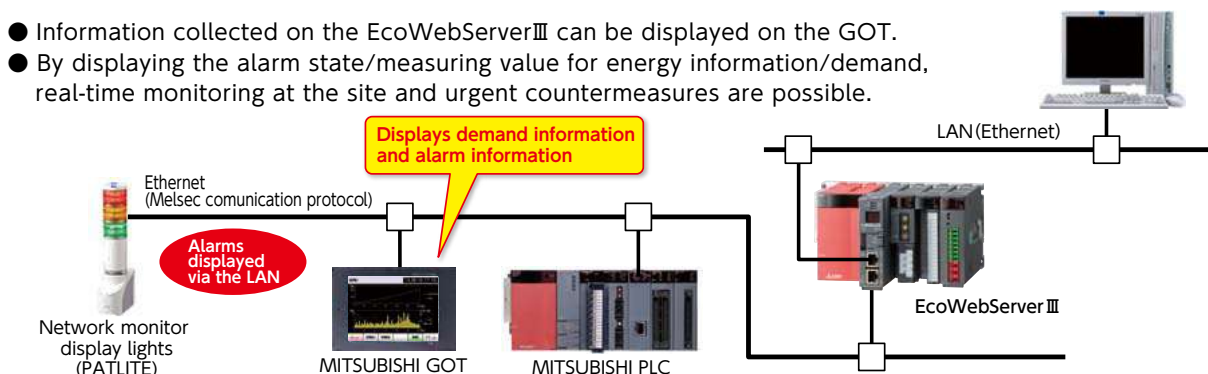

* Demand alarm function can be realized Only MES3-255C-DM-EN.

9. Possible to Create Ledgers

- Use the software for creating daily and monthly reports and analyzing specific consumption, "EcoMeasureIII", (sold separately), and you will be able to create a ledger for daily, monthly and annual reports from the CSV files saved automatically by EcoWebServerIII (see p.33 for details).
- Use the master ledger function, and you will be able to customize the ledger form.

[Example of Daily report output]


Calculate date		Title			
2012.05.05 (Wed)		Daily Report 1			
Time	Product Line	Printer	Rest Room	Shop	Other
0:00	0.0	0.0	0.0	0.0	0.0
1:00	10.0	0.0	0.0	0.0	955.9
2:00	10.0	0.0	0.0	0.0	955.9
3:00	4.0	0.0	0.0	0.0	0.0
4:00	7.0	0.0	0.0	0.0	954.4
5:00	7.0	0.0	0.0	0.0	0.7
6:00	0.0	0.0	0.0	0.0	954.4
7:00	1.0	0.0	0.0	0.0	4.7
8:00	10.0	0.0	0.0	0.0	957.0
9:00	37.0	3.0	11.0	4.0	0.0
10:00	40.0	1.0	1.0	0.0	957.0
11:00	36.0	0.0	16.0	3.4	0.0
12:00	30.0	0.0	0.0	0.0	955.4
13:00	30.0	0.0	0.0	0.0	0.7
14:00	82.0	0.0	0.0	0.0	1.0
15:00	80.0	3.0	0.0	0.0	9.7
16:00	130.0	10.0	30.0	0.2	0.0
17:00	101.0	5.0	18.0	1.1	0.0
18:00	110.0	0.0	0.0	0.0	0.0
19:00	100.0	0.0	0.0	0.0	1.0
20:00	70.0	2.0	0.0	0.0	954.1
21:00	80.0	0.0	7.0	0.0	956.0
22:00	72.0	0.0	0.0	0.0	1.0
23:00	30.0	10.0	0.0	0.0	956.9
0:00	20.0	0.0	0.0	0.0	0.0
Day Total	1411.0	37.0	1025.0	10966.1	
Maximum	134.0	10.0	30.0	109.9	
Minimum	0.0	0.0	0.0	0.0	
Average	31.0	3.2	16.9	456.3	

You can create stamp boxes and use them for providing materials for related departments.


10. Simultaneously visualize demand trends and energy consumption per building/load

Compatible model: MES3-255C-DM-EN only

- As the breakdown of power demand (load balance) can be easily understood from the power demand trends and stacked bar graphs for each regional substation and operating equipment can be reviewed, and operations can be planned and proposed based on the analysis results, which enable peak shift/peak cut.

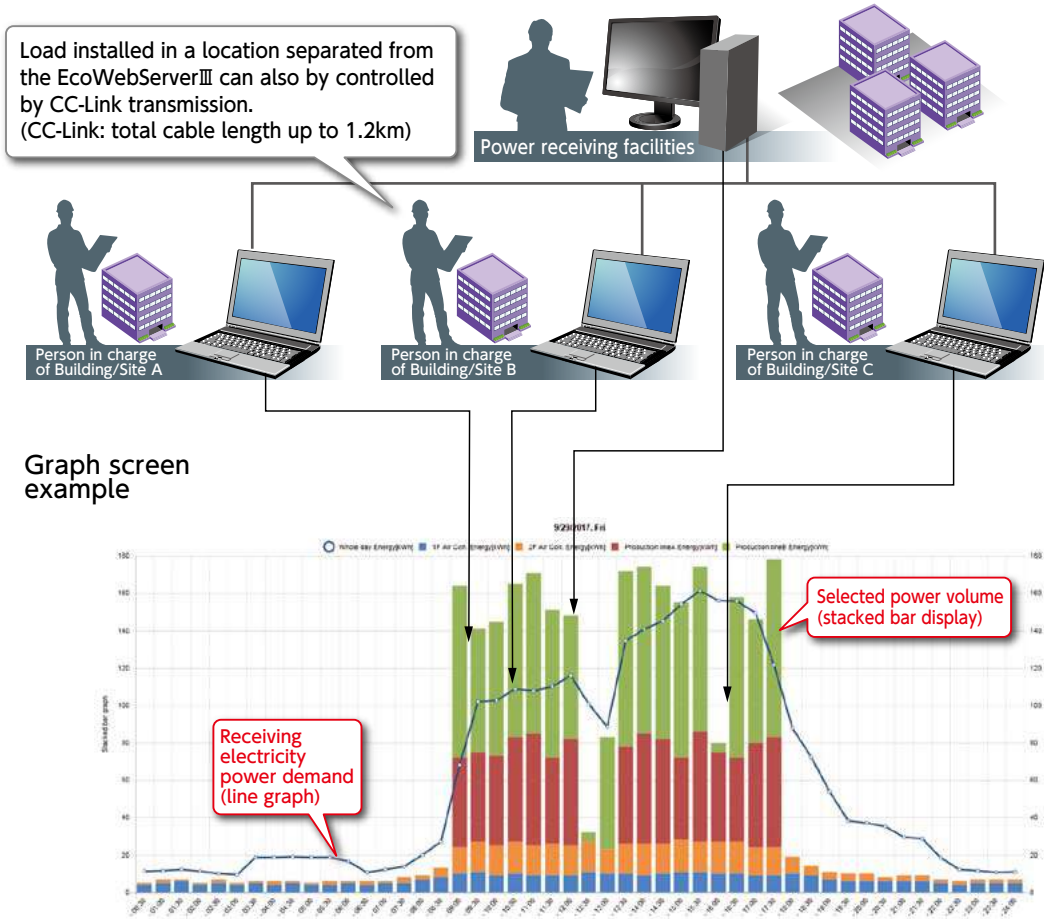


● Demand monitor screen

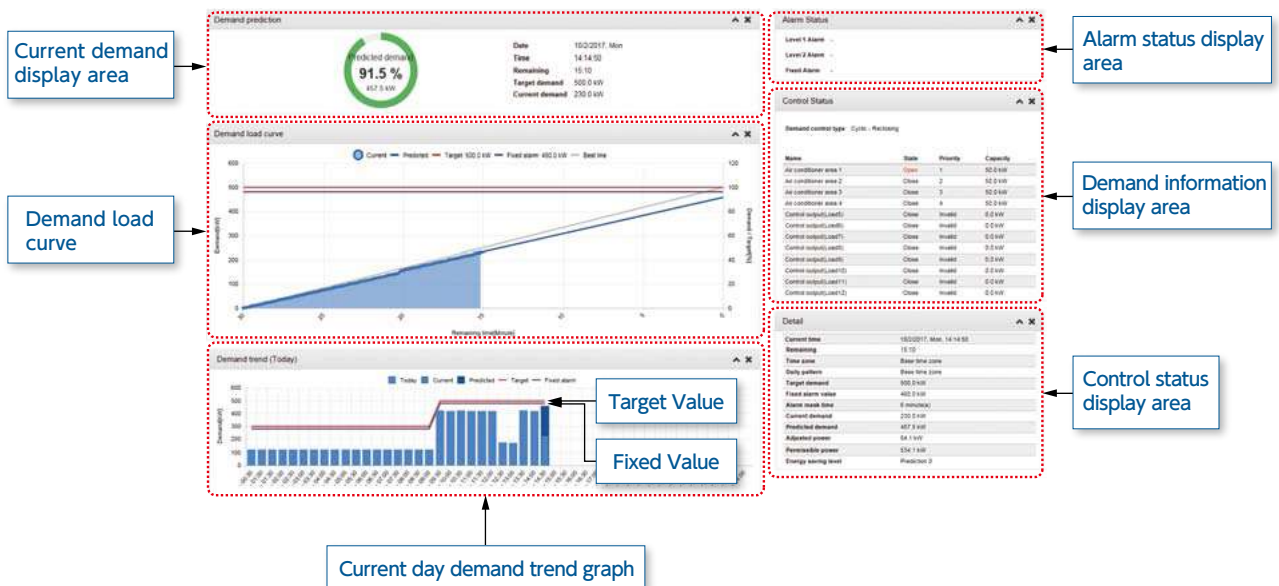

11. Energy-saving air conditioning operation realized with integrated air-conditioning controller


Compatible model: MES3-255C-DM-EN only

- Demand control possible by interconnecting with Mitsubishi Electric Web-compatible integrated controller—AE-200E G-150AD, etc.
Additionally, automatic control of load possible through contact point output via main unit of EcoWebServerIII and CC-Link.

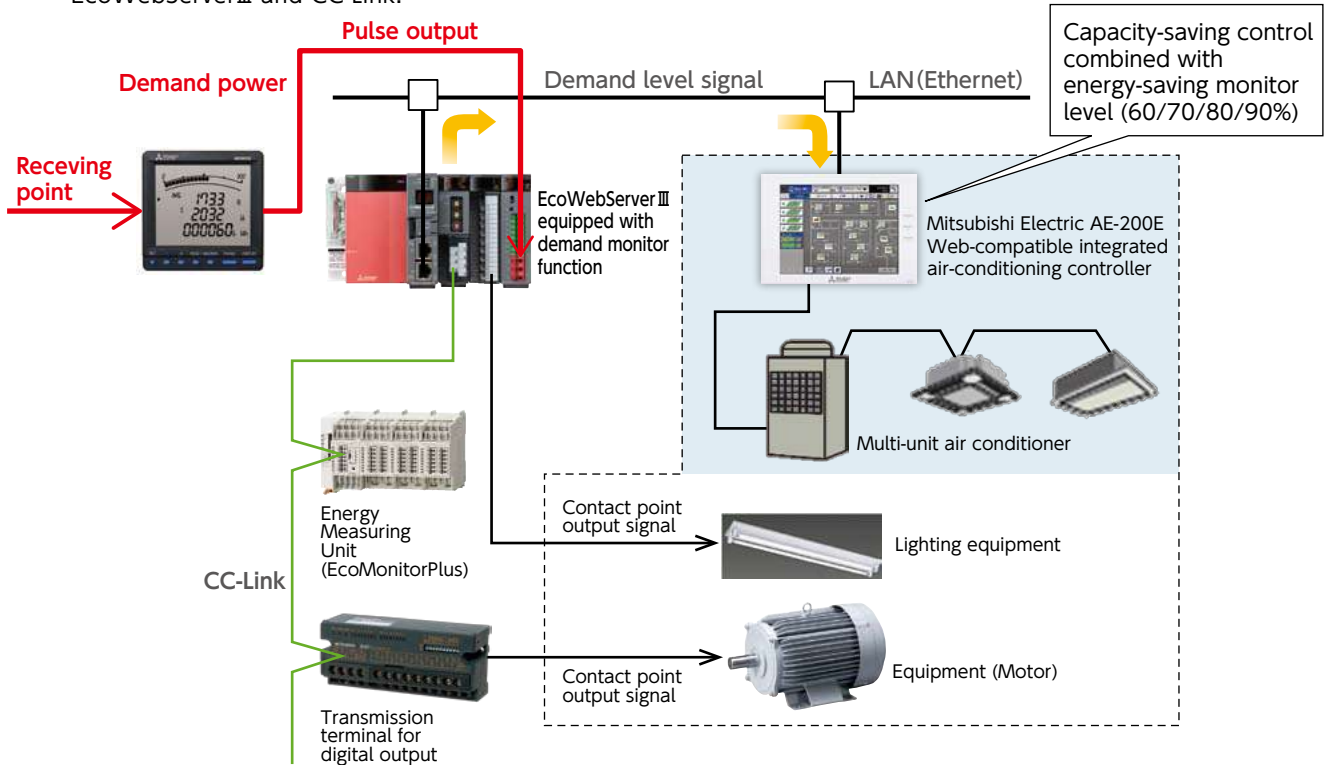

12. Virtual Measuring Point Function

- A virtual measuring point refers to a measuring point for which the computation result between measuring points is used as virtual measurement data. A **maximum of 128** measuring points (excluding the 255 measuring points) can be registered.

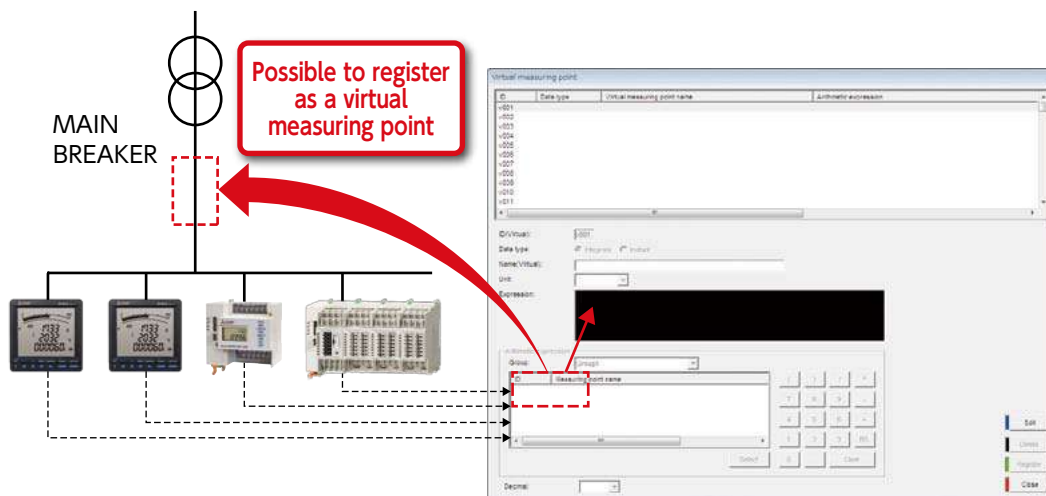

- It is possible to convert into CO₂ or electricity charges.
All you have to do for setting is to input the computing equation of measurement data and input the unit by hand or select it from the list.

Example Convert the energy into CO₂ and display a graph

$$\begin{array}{|c|} \hline \text{Computing equation} \\ \hline \text{Select a registered} \\ \text{measuring point [Wh]} \\ \hline \end{array} \times \begin{array}{|c|} \hline \text{Input the conversion} \\ \text{coefficient} \\ \hline \end{array} = \begin{array}{|c|} \hline \text{CO}_2 \text{ equivalent} \\ \text{amount} \\ \hline \end{array} \left(\begin{array}{|c|} \hline \text{Set the} \\ \text{unit [t-CO}_2\text{]} \\ \hline \end{array} \right)$$

Energy Saving Management for the Whole Factory



Use Demand Monitor Measuring Point Comparison Graphs and Reduce Electricity Charges. Only with demand control function

Best suited to such customers as :

- Have a high ratio of electricity charges in the plant and want to reduce electricity charges.
- Can't monitor the demand condition constantly.
- Can't grasp the conditions or rate of energy usage in each department.

Tips for Electricity Charge Reduction (In the case fixed block demand management)

● The reduction of contract demand leads to the reduction of electricity charges.

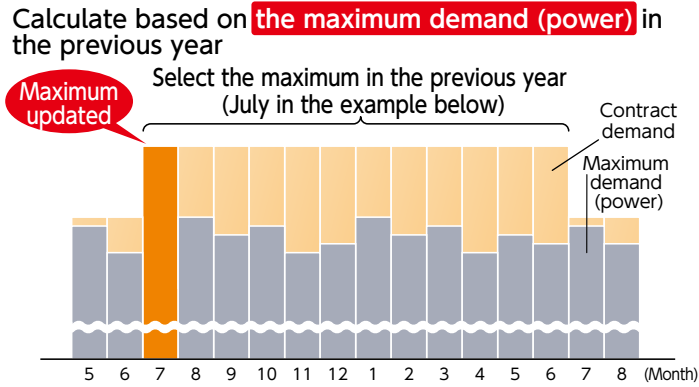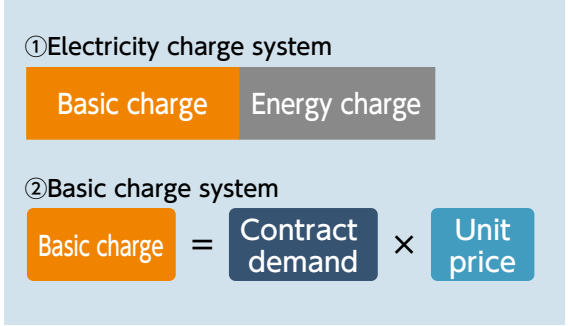

Example: a new maximum demand (power) was established in July and the demand was lowered from the next month.

By lowering the maximum demand in a year, you will be able to reduce the contract demand!

Demand Reduction by EcoWebServer III

1. Set the Target Demand

Use the dedicated software for setting and set the target demand value based on the past conditions of energy usage.

2. Select the Load to Cut Off

Identify the load to control when the target value is exceeded. It is general to select the load of air conditioning or lighting on which a sudden control or cut-off has a smaller influence.


3. Consider the Control Method (Manual or Automatic Control)

EcoWebServer III enables to create a system to control loads automatically when the target value is exceeded (up to 12 loads).

4. Settings for External Equipment Coordination (Automatic Control)

Set the load (capacity) to control automatically by using the dedicated software for setting.

You can configure the settings easily by the dedicated software for setting!

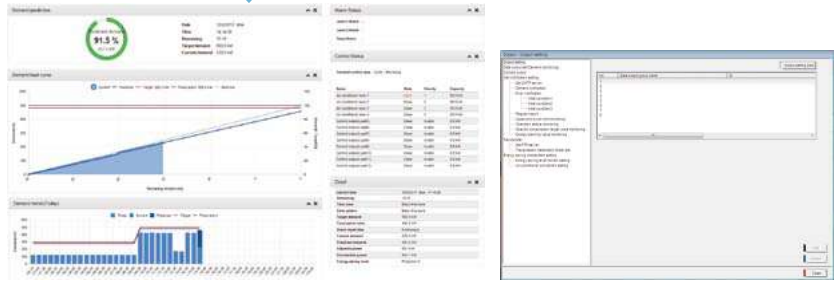

The troublesome creation of ladder or other programs isn't necessary.

5. Check Daily Demand Monitoring and Control Information in Graphs

You can check demand graphs from PCs, smartphones and tablets.

Demand graphs



Check the demand forecast monitor

Check the demand condition constantly and take a measure when the forecast demand is above. If you control manually, you can cut off the peak energy by controlling the load of air conditioning or others on which the influence is smaller.

Check control conditions

You can check the control condition of the loads registered in setting.


Check daily demand trend

It is possible to check the peak period at a glance, so you can find out the time period where a lasting measure is necessary.

6. Impose on Departments a Duty to Conduct and Report Energy-Saving Improvement Activities

For reducing the contract demand, each department has to conduct improvement activities to lower the demand. Then, it is important to use a measuring point comparison graph to find out the points where an improvement can be expected to have an effect.

Measuring point comparison graph (daily)

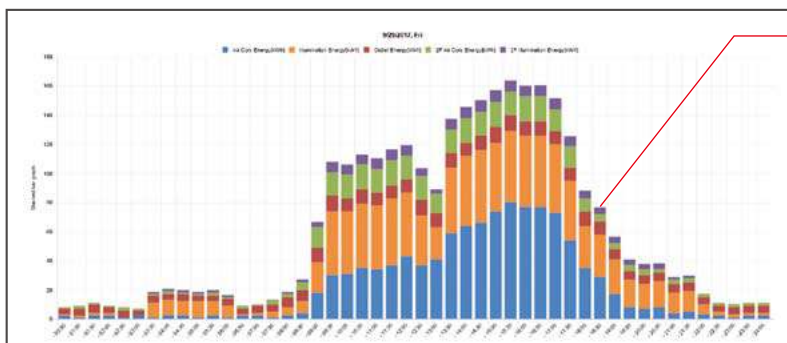

Identify the bottleneck part, based on a stacked bar chart

It is possible to clarify the energy consumption rate in each department in the whole. The department with more energy consumption is visible, so you can conduct efficient energy-saving activities.

7. Coordinate with Departments to Improve the Management and Introduce Energy-Saving Equipment

See p.19 for details.

8. Check the Effect before and after an Improvement

It is possible to use a date comparison graph to compare the data before and after an improvement. You can check the effect of an energy-saving measure at a glance.

Energy-Saving Management in Each Department

Use Date Comparison Graphs and Improve the Management in Each Department.

Best suited to such customers as :

- Don't have a person in charge of energy saving in each department and can't conduct energy-saving activities in each department.
- Want to introduce energy-saving equipment (such as LEDs and efficient transformers), but don't know from where to start the introduction.
- Haven't set the target value of energy usage and don't have the limit of energy usage in each department.

Tips for Operational Management

● Assign a person in charge in each department using energy and create the awareness of energy saving.

● **Substation for each building**

Conduct measurement at each substation and select a person in charge if a substation is disposed for each production site and office building.


● **Panelboard for each department and floor**

Select a person in charge on each floor and conduct operational management of air conditioning, lighting, OA circuits and others.


● Create a system for managing energy-saving targets from the top down.

(Example)

Person in charge of plant energy

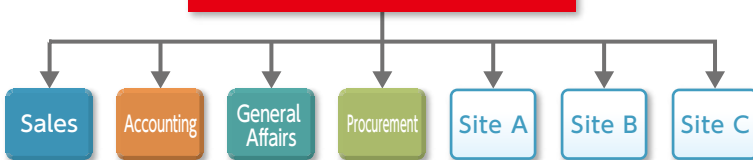

Instruct to manage the target, based on quantitative graph data

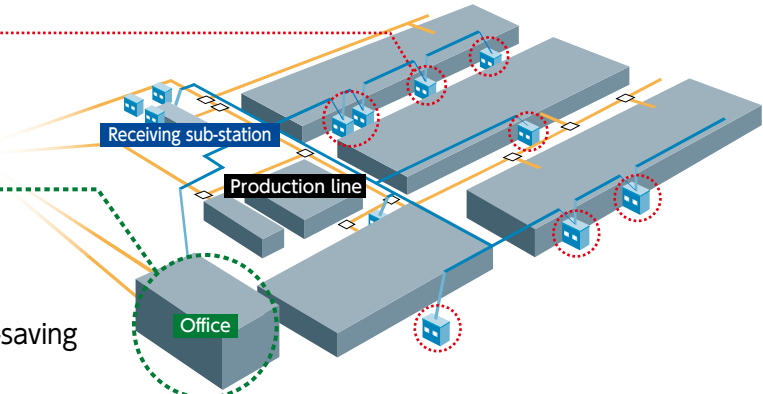


Energy-Saving Activities by Improving Management with EcoWebServer III

1. Set the Target Value in Each Department

Set the target (plan) value from the "Target Value" button on the Web screen.

2. Conduct Management Not to Exceed the Target, Based on a Monthly Graph

Check regularly not to exceed the target value at the end of a month.

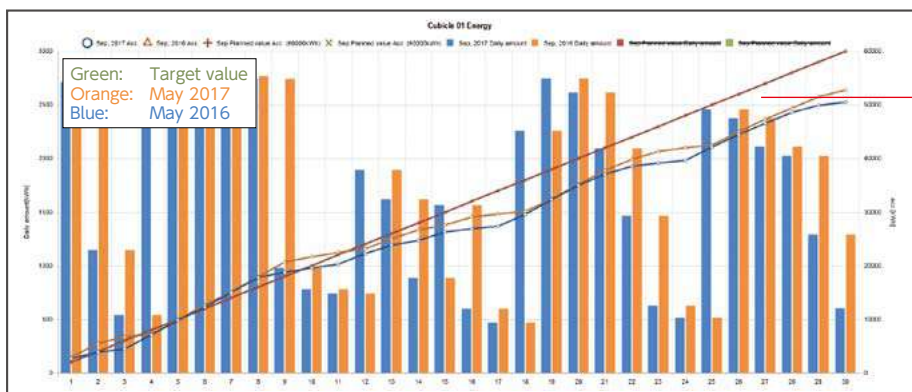


■ **Visible plan/target value**

You can set the target value every month on a Web graph and reflect it on the graph. Conduct monthly target management based on the information.

3. Find Improvable Points, Based on a Date Comparison Graph

Find out improvement points, based on a date comparison graph.

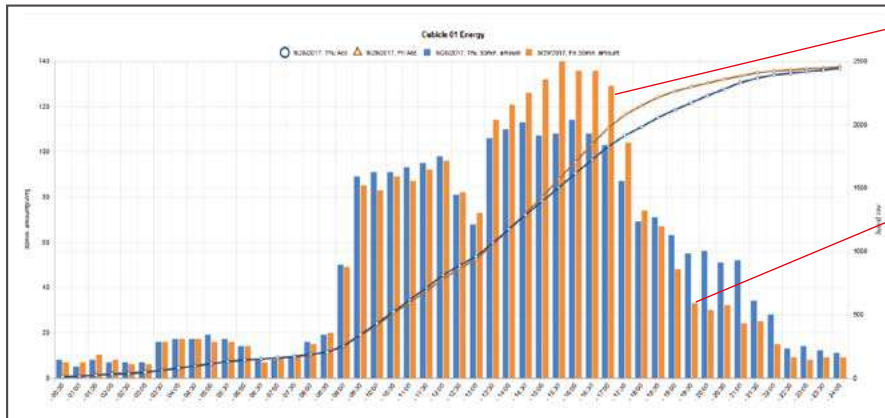

■ **Identify improvement points, based on comparison values**

Clarify the point of change from the comparison date and take a measure if energy usage is obviously different in a date comparison.

■ **Consider energy consumption measures during a recess and after the fixed time**

Take measures including the automatic control of lighting and air conditioning if the energy usage is high during a recess or after the fixed time.

4. Improve the Management and Introduce Energy-Saving Equipment at the Level of a Person in Charge


Improve the management and introduce energy-saving equipment once the part to take an energy-saving measure in is decided.

Examples of Management Improvement

(Buildings and offices)


- Limiting the time for lighting
 - Limiting the time for operating air conditioning (only during the fixed time)
 - Turning off the light in a lunch break and turning off the light simultaneously after the fixed time
 - Setting the date for going home simultaneously on time and limiting late-night work
-
- Reconsidering the time for starting up a facility
 - Controlling the operation of ancillary facilities (including a cooling tower incidental to a compressor)

Introduction of Energy-Saving Equipment

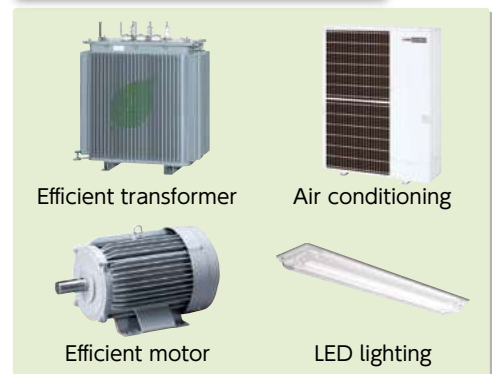

5. Check Return on Investment before and after an Improvement

Check the effect of the improvement activities and equipment introduction conducted and use the result for the next improvement plan.

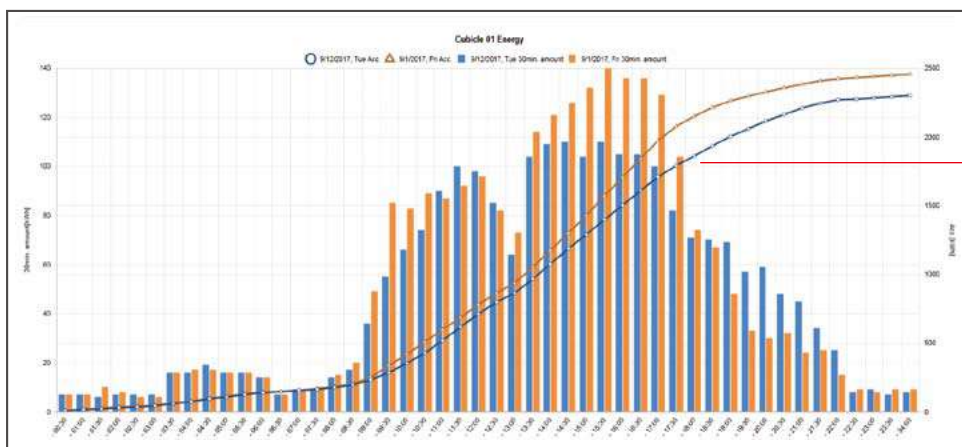

■ **Check the effect before and after an improvement**

Check the effect and make it a step for introducing equipment in the future when a specified period passes after taking a measure.

Productivity Improvement on the Site

Use Specific Consumption Graphs and Achieve the Productivity Improvement.

Best suited to such customers as :

- Can't show energy usage on the production site quantitatively and haven't achieved an improvement on the site.
- Want to make the information of specific energy consumption visible.
- Can't grasp the specific energy consumption in each facility.

Tips for improving the productivity by specific consumption management


● Select energy-saving model lines

Set the lines with higher energy usage or frequent program changes as energy-saving model lines and conduct specific consumption management.

Roll out to other lines if an effect is provided


● Various data measurement methods

Energy data

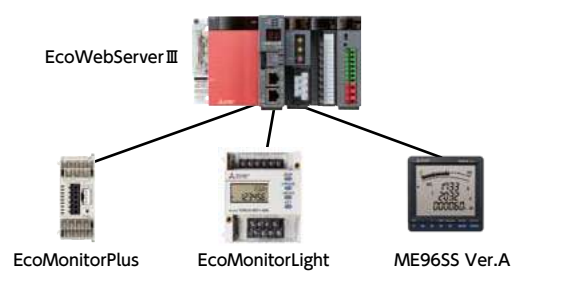


Production amount

Pattern ① : Obtain the production amount from a Mitsubishi PLC

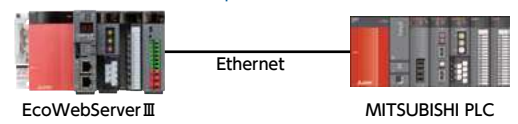

Pattern ② : Input pulse signals for information of a photoelectric sensor and others to EcoWebServer III

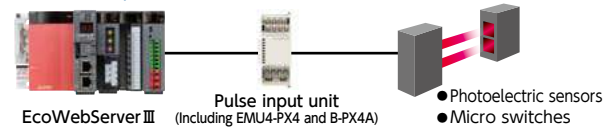

Process for Specific Consumption Management by EcoWebServer III

1. Configure the Settings for a Specific Consumption Graph

You can configure the settings easily only by using the dedicated software for setting and selecting energy and production amounts.

2. Set a Target Value for Specific Consumption


You can easily set from a Web browser.

ID	Name	Display	Planned value	Unit	Production quantity of the planned value monitoring	Production quantity of the planned value monitoring
1	Production lineA	set	5.0	kWh / piece	Invalid	Piece
2	Production lineB	not set	-	kWh / piece	Invalid	Piece

Production quantity of the planned value monitoring: when the production quantity/denominator is below the input production quantity of the planned value monitoring, the Planned value monitoring of the specific consumption will not be executed.

3. Monitor Specific Consumption graph after Completing the Settings

You can check specific consumption graphs from PCs, smartphones and tablets.

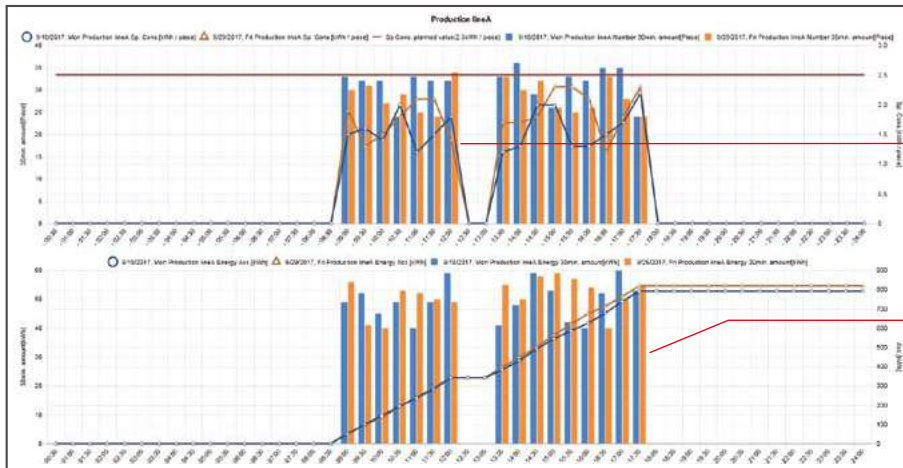

Identify improvement points, based on specific consumption

Find out the parts where specific consumption is worsened and take a measure after identifying the cause.


Monitor facility energy usage

Take a measure after identifying the cause if you find abnormal values because a date comparison graph for facility energy usage is displayed, too.

4. Coordinate with the Site to Conduct Improvement Activities and Introduce Efficient Equipment

Submit an improvement request to the site and improve the management based on quantitative graph data.

Improvement Example Optimize the time for starting up a facility

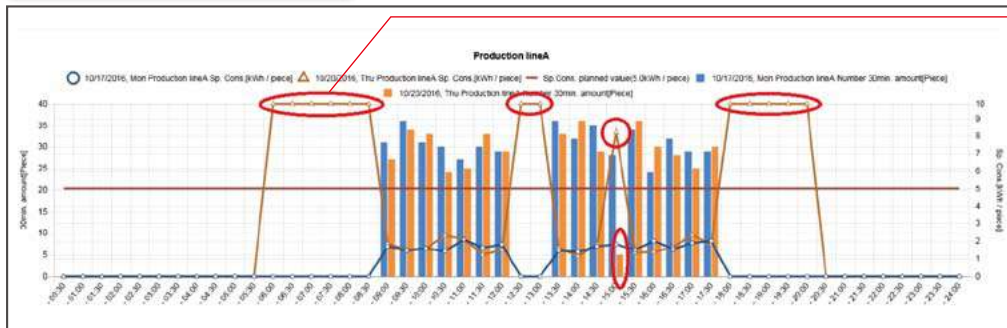


Check abnormal values for specific consumption

When a facility wasn't in operation, the standby time after starting up was long and the specific consumption got worsened. Turning on the facility 30 minutes before the start of operation has led to the reduction of the standby time.

5. Check and Report the Effect before and after a Measure

Check the effect before and after a management improvement in a date comparison graph. Roll out the same measure equipment if an improvement is achieved, and select another equipment if little effect is provided.

Actions for Preventive Maintenance (Extra Actions)

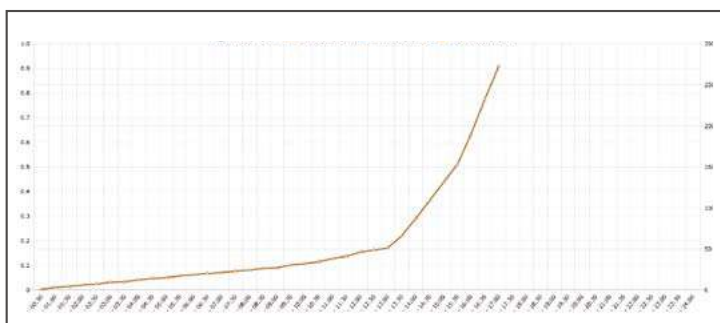

- 1.Measure the load/leakage current of a motor.
- 2.Set a target value and output an alarm when the target is exceeded.
- 3.Detect an abnormality before a trouble and conduct early replacement.

Prevent the production loss caused by a motor trouble and improve the productivity!

Energy-saving Data Collection Server EcoWebServerIII



Product name	Energy-saving Data Collection Server
Model no.	MES3-255C-EN
Communication	CC-Link, MODBUS® (TCP, RTU*)

Product name	Energy-saving Data Collection Server (with demand control function)
Model no.	MES3-255C-DM-EN
Communication	CC-Link, MODBUS® (TCP, RTU*)

* MODBUS® TCP ⇔ RTU converter is required for MODBUS® RTU communication.
That has been functionally verified is SI-485 MB, SI-485 MB2 by LINEEYE CO., LTD.

Network Specifications (CC-Link)

Item	Specifications													
Transmission speed	156kbps / 625kbps / 2.5Mbps / 5Mbps / 10Mbps													
Maximum total cable length (maximum transmission distance)	Transmission speed													
	156kbps	1200m												
	625kbps	900m												
	2.5Mbps	400m												
	5Mbps	160m												
10Mbps	100m													
Maximum number of connected units	64 units However, conditions on the right must be met													
	<table border="1"> <tr> <td>1. Total number of stations</td> <td>$a+b \times 2+c \times 3+d \times 4 \leq 64$</td> </tr> <tr> <td>a: 1 station occupied, b: 2 stations occupied, c: 3 stations occupied, d: 4 stations occupied</td> <td></td> </tr> <tr> <td>2. Number of units connected</td> <td>$16 \times (A+D) + 54 \times B + 88 \times C \leq 2304$</td> </tr> <tr> <td>A: Number of remote I/O stations</td> <td>...64 max</td> </tr> <tr> <td>B: Number of remote device stations</td> <td>...42 max</td> </tr> <tr> <td>C: Number of local stations, intelligent device stations</td> <td>...26 max</td> </tr> <tr> <td>D: Number of reserve stations *</td> <td></td> </tr> </table>	1. Total number of stations	$a+b \times 2+c \times 3+d \times 4 \leq 64$	a: 1 station occupied, b: 2 stations occupied, c: 3 stations occupied, d: 4 stations occupied		2. Number of units connected	$16 \times (A+D) + 54 \times B + 88 \times C \leq 2304$	A: Number of remote I/O stations	...64 max	B: Number of remote device stations	...42 max	C: Number of local stations, intelligent device stations	...26 max	D: Number of reserve stations *
1. Total number of stations	$a+b \times 2+c \times 3+d \times 4 \leq 64$													
a: 1 station occupied, b: 2 stations occupied, c: 3 stations occupied, d: 4 stations occupied														
2. Number of units connected	$16 \times (A+D) + 54 \times B + 88 \times C \leq 2304$													
A: Number of remote I/O stations	...64 max													
B: Number of remote device stations	...42 max													
C: Number of local stations, intelligent device stations	...26 max													
D: Number of reserve stations *														
Communication method	Broadcast polling method													
Synchronization method	Frame synchronization method													
Encoding method	NRZI method													
Transmission route format	Bus (RS-485)													
Transmission format	HDLC compatible													
Error control method	CRC ($x^{16}+x^{12}+x^{15}$)													
Connecting cable	CC-Link Ver1.10-compatible dedicated cable													

* Unregistered station numbers from station 1 to the maximum number of stations are counted as reserve stations.

MODBUS® TCP

Item	Specifications	
Interface	1port (10BASE-T/100BASE-TX)	
Transmission method	Base band	
Number of cascade connection stages *1	Max. 4 stages (10BASE-T) Max. 2 stages (100BASE-TX)	
Maximum node-to-node distance	200m	
Maximum segment length *2	100m	
Connector applicable for external wiring	RJ45	
Cable	10BASE-T	Cable compliant with the IEEE802.3 10BASE-T Standard (unshielded twisted pair cable (UTP cable), Category 3 or more)
	100BASE-TX	Cable compliant with the IEEE802.3 100BASE-TX Standard (shielded twisted pair cable (STP cable), Category 5 or more)
Protocol	MODBUS® TCP (Port Number 502)	

*1 This is the maximum number of cascade connection stages when a repeater hub is used. For the maximum number of cascade connection stages, contact to the manufacturer for the switching hub used.

*2 Length between a hub and a node.

MODBUS® RTU

Item	Specifications
Physical interface	RS-485 2wires half duplex
Protocol	RTU mode
Transmission wiring type	Multi-point bus (either directly on the trunk cable, forming a daisy-chain)
Slave address	1~247 (F7)
Response time	1s or less
Distance	1200m
Max. number	31
Terminate	120Ω 1/2W
Recommended cable	Shielded twisted pair, AWG24 to 14 gauge

Note: Baud rate, stop bit and parity are necessary to set in the setting-mode of the each terminal.

MES3-255C-EN, MES3-255C-DM-EN(CC-Link)

Product Name	Icon/type name	Station type	Number of occupying stations
EnergyMeasuringUnit (1P2W, 1P3W, 3P3W)	EMU4-BD1-MB	Remote device station	1 station occupied
EnergyMeasuringUnit (1P2W, 1P3W, 3P3W, 3P4W)	EMU4-HD1-MB	Remote device station	1 station occupied
EnergyMeasuringUnit (1P2W, 1P3W, 3P3W, 3P4W)	EMU4-FD1-MB	Remote device station	1 station occupied
Energy measuring standard model *1	EMU4-BM1-MB	Remote device station	1 station occupied
Energy measuring high performance model *1	EMU4-HM1-MB	Remote device station	1 station occupied
Insulation Monitoring model *1	EMU4-LG1-MB	Remote device station	1 station occupied
Energy measuring extension model for same voltage system *2	EMU4-A2	Remote device station	*3
Energy measuring extension model for different voltage system *2	EMU4-VA2	Remote device station	*3
Energy measuring extension model for analog input *2	EMU4-AX4	Remote device station	*3
Energy measuring extension model for pulse/digital input *2	EMU4-PX4	Remote device station	*3
EnergyMeasuringUnit (Power reception and distribution monitoring (standard product 3 circuits))	EMU2-RD3-C	Remote device station	1 station occupied
EnergyMeasuringUnit (Power reception and distribution monitoring (standard product 5 circuits))	EMU2-RD5-C	Remote device station	1 station occupied
EnergyMeasuringUnit (Power reception and distribution monitoring (standard product 7 circuits))	EMU2-RD7-C	Remote device station	1 station occupied
EnergyMeasuringUnit (Power reception and distribution monitoring (3P4W 2 circuits))	EMU2-RD2-C-4W	Remote device station	1 station occupied
EnergyMeasuringUnit (Power reception and distribution monitoring (3P4W 4 circuits))	EMU2-RD4-C-4W	Remote device station	1 station occupied
EnergyMeasuringUnit	EMU3-DP1-C	Remote device station	1 station occupied
MDU breaker (WS-V)	MDU(WS-V) NF250-SEV/HEV with MDU	Remote device station	1 station occupied
MDU breaker (WS)	MDU(WS) NF400-SEP/HEP with MDU NF600-SEP/HEP with MDU NF800-SEP/HEP with MDU	Remote device station	1 station occupied
Low-voltage air circuit breaker (AE-SW with CC-Link interface unit)	AE-SW(BIF-CC)	Remote device station	1 station occupied
Electronic multi-measuring instrument	ME965SHA-MB	Remote device station	1 station occupied
Electronic multi-measuring instrument	ME965SRA-MB	Remote device station	1 station occupied
Electronic multi-measuring instrument	ME96SSH-MB	Remote device station	1 station occupied
Electronic multi-measuring instrument	ME96SSR-MB	Remote device station	1 station occupied
Electronic multi-measuring instrument	ME96NSR	Remote device station	1 station occupied
Electronic multi-measuring instrument with transmission function	ME110SSR-C(H)	Remote device station	1 station occupied
Electronic multi-measuring instrument with transmission function	ME110NSR-C	Remote device station	1 station occupied
Thermocouple temperature input unit	AJ65BT-68TD	Remote device station	4 station occupied
Platinum resistance temperature sensor Pt 100 temperature input unit	AJ65BT-64RD3	Remote device station	4 station occupied
Analog-digital conversion unit	AJ65BT-64AD	Remote device station	2 station occupied
Terminal block type 24 VDC input unit (8 points)	AJ65S8TB1-8D	Remote I/O station	1 station occupied
Terminal block type 24 VDC input unit (16 points)	AJ65S8TB1-16D	Remote I/O station	1 station occupied
Terminal block type 24 VDC input unit (32 points)	AJ65S8TB1-32D	Remote I/O station	1 station occupied
Terminal block type DC input transistor output combined unit (Input 8 points, Output 8 points)	AJ65S8TB1-16DT	Remote I/O station	1 station occupied
Terminal block type DC input transistor output combined unit (Input 16 points, Output 16 points)	AJ65S8TB1-32DT	Remote I/O station	1 station occupied
CC-Link master/local unit (Local station)	QJ61BT11N	Intelligent device station	1 station occupied
CC-Link master/local unit (Local station)	LCPU/LJ61BT11	Intelligent device station	1 station occupied

*1 EMU4-BM1-MB, EMU4-HM1-MB, EMU4-LG1-MB are main units of EcoMonitorPlus.

*2 EMU4-A2, EMU4-VA2, EMU4-AX4, EMU4-PX4 are extension units of EcoMonitorPlus.

*3 Combination of main unit and extension unit occupied 1 station.

MES3-255C-EN, MES3-255C-DM-EN (MODBUS®)


Product Name	Icon/type name
Electronic multi-measuring instrument	ME965SHA-MB
Electronic multi-measuring instrument	ME965SRA-MB
Electronic multi-measuring instrument	ME965SEA-MB
Electronic multi-measuring instrument	ME96SSH-MB
Electronic multi-measuring instrument	ME96SSR-MB
Electronic multi-measuring instrument	ME96SSE-MB
EnergyMeasuringUnit (1P2W, 1P3W, 3P3W)	EMU4-BD1-MB
EnergyMeasuringUnit (1P2W, 1P3W, 3P3W, 3P4W)	EMU4-HD1-MB
EnergyMeasuringUnit (1P2W, 1P3W, 3P3W, 3P4W)	EMU4-FD1-MB
Energy measuring standard model *1	EMU4-BM1-MB
Energy measuring high performance model *1	EMU4-HM1-MB
Insulation Monitoring model *1	EMU4-LG1-MB
Energy measuring extension model for same voltage system *2	EMU4-A2
Energy measuring extension model for different voltage system *2	EMU4-VA2
Energy measuring extension model for analog input *2	EMU4-AX4
Energy measuring extension model for pulse/digital input *2	EMU4-PX4

*1 EMU4-BM1-MB, EMU4-HM1-MB, EMU4-LG1-MB are main units of EcoMonitorPlus.


*2 EMU4-A2, EMU4-VA2, EMU4-AX4, EMU4-PX4 are extension units of EcoMonitorPlus.

1. Date comparison graph screen

Electric consumption/current display

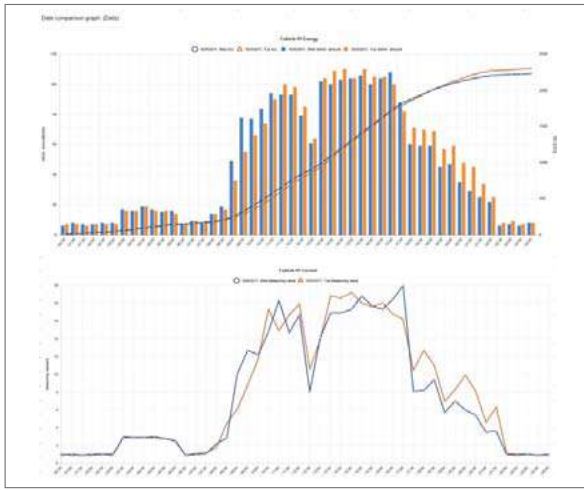


Voltage/power factor display

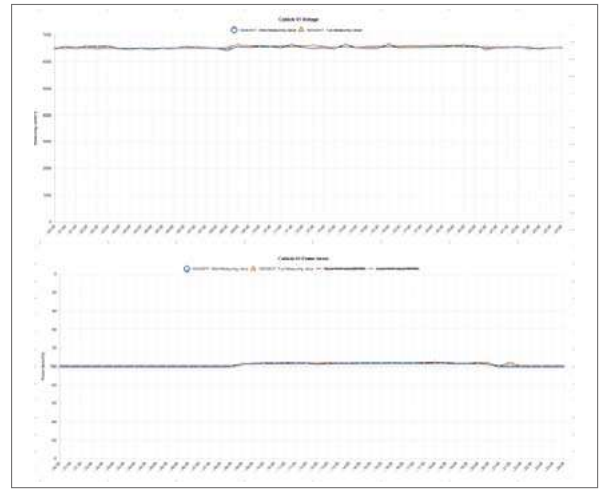


2. Measuring point comparison graph screen

Analysis by application

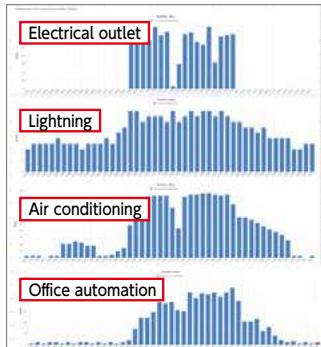

Correlation analysis (graph overlapping)

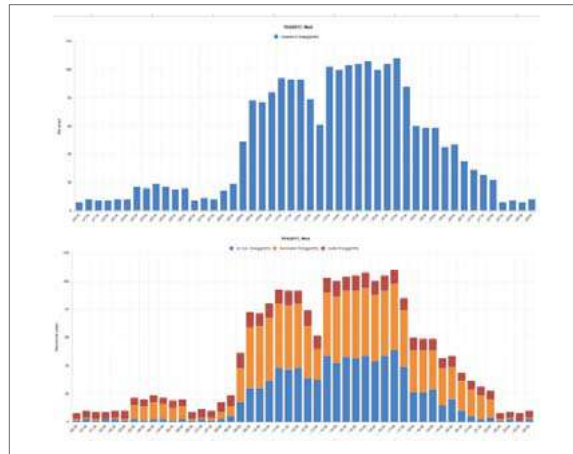


3. Specific consumption graph screen


Daily



Monthly

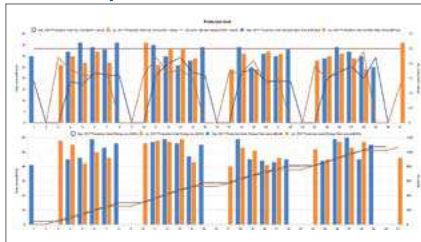

Yearly

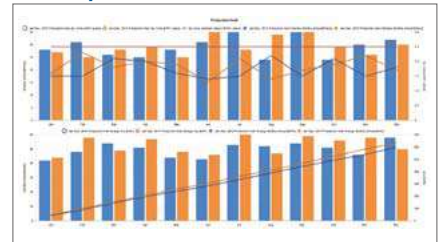


4. Demand monitor screen




5. Demand trend graph screen


Daily

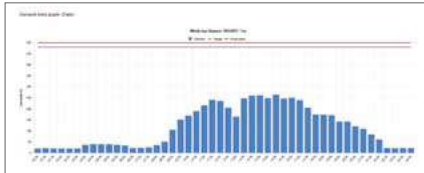

Monthly

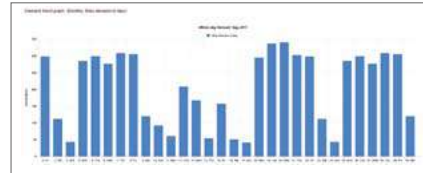

Yearly

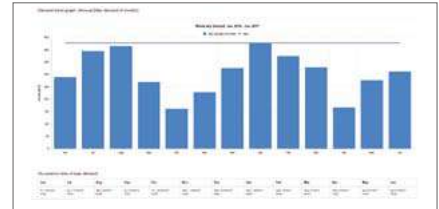

6. Current value/contact point output monitor screen

Current value

Current value monitor (Group) Accumulated value 10/4/2017, Wed, 13:46:41

ID	Name	Current value
1	Cubicle01 Cubicle 01 Current	11.8 A
2	Cubicle01 Cubicle 01 Voltage	101.8 V
3	Cubicle01 Cubicle 01 Power	211.8 kW
4	Cubicle01 Cubicle 01 Energy	131004 kWh
5	Cubicle01 Cubicle 01 Power factor	99.3 %
6	Cubicle01 Air Con. Energy	3111 kWh
7	Cubicle01 Illumination Energy	119 kWh
8	Cubicle01 Outlet Energy	1251 kWh

Contact point output

Contact output monitor 10/2/2017, Thu, 15:33:03


No.	Name	Item name	Destination	Ck	Output type	State
1	Demand level 1 alarm	Level 1 Alarm	Internal output unit	6	Interlock	OFF
2	Demand level 2 alarm	Level 2 Alarm	Internal output unit	9	Interlock	OFF
3	Demand level Fixed alarm	Level fixed alarm	Internal output unit	3	Interlock	ON
4	EES Safety alarm	Safety alarm	Internal output unit	3	On/stand	OFF
5	Demand control air con 1	Air conditioner area 1	Internal output unit	4	Interlock	Close <input type="button" value="Change"/>
6	Demand control air con 2	Air conditioner area 2	Internal output unit	6	Interlock	Close <input type="button" value="Change"/>
7	Demand control air con 3	Air conditioner area 3	Internal output unit	6	Interlock	Close <input type="button" value="Change"/>
8	Demand control air con 4	Air conditioner area 4	Internal output unit	7	Interlock	Close <input type="button" value="Change"/>
9	Facility status ON OFF	Facility A Working status	Facility state	1	On/stand	ON
10	Color 31 job standard	Cubicle 01 Energy	Facility state	3	Interlock	ON <input type="button" value="OFF"/>

Factories

Support Energy-saving Activities using "Visible Management".

1. Monitor/Manage energy by department
2. Specific consumption-based management of energy-saving activities
3. Monthly/Annual target-based management
4. Monitoring of equipment operating status
5. Manage/Record energy data


In the office...

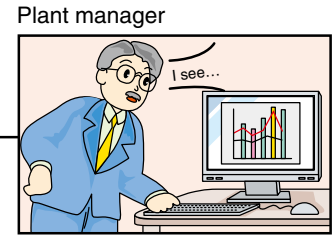

To monitor equipment status





For target management

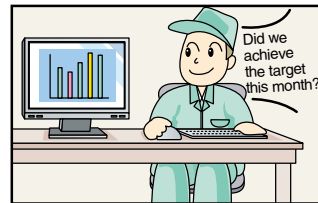


LAN(Ethernet)

At production site...

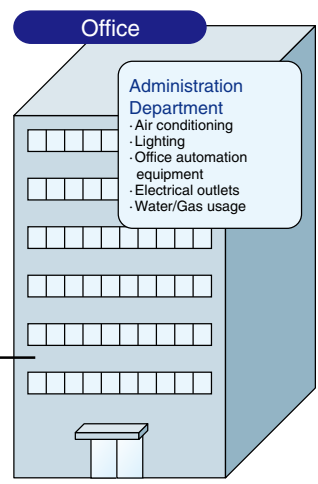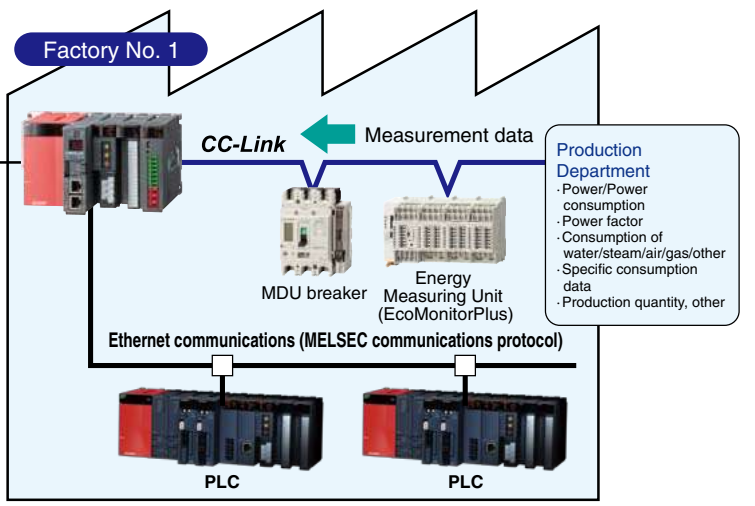

Factory No. 2

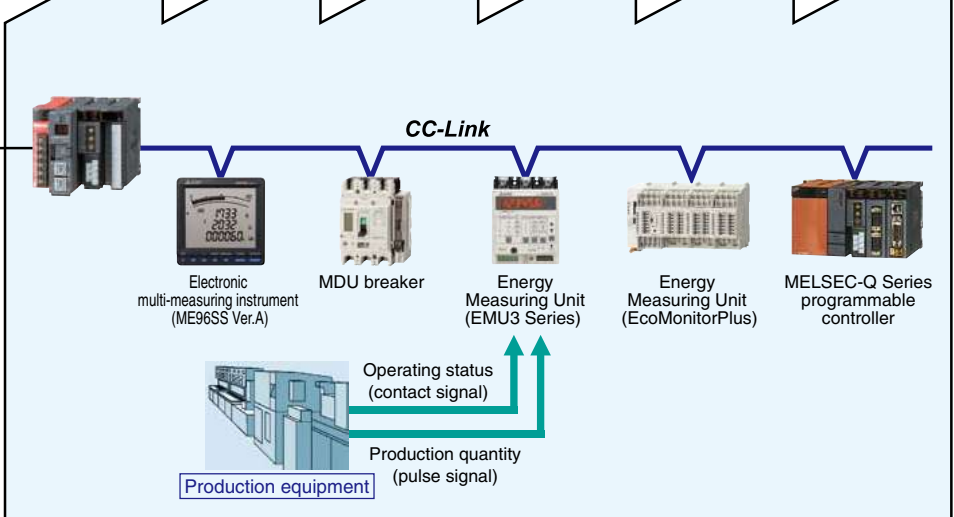


For improvement activities



Buildings


Significantly reduce installation cost by using the existing LAN.

- 1. Manage/Monitor energy by floor/application
- 2. Manage data remotely
- 3. Easy for tenants and other personnel to read meters
- 4. Monitor operating status of building facilities (e.g., elevators, escalators, air conditioners)
- 5. Record/Manage energy data

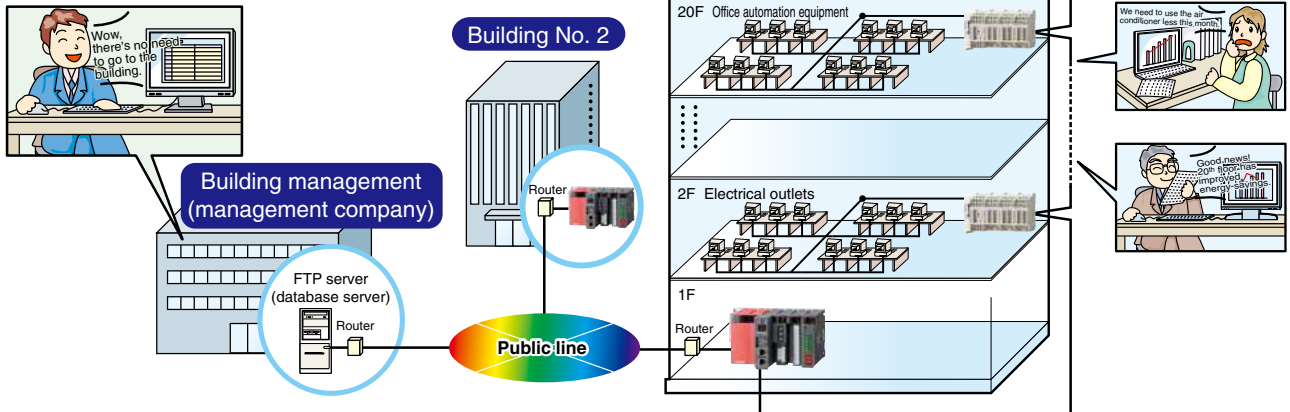

Stores

- 1. Remote management of energy data for small, spread-out stores
- 2. Compare data of each store
- 3. Record/Monitor equipment operating status (e.g., manage freezer/refrigerator temperatures)
- 4. Easy for tenants and personnel to read meters

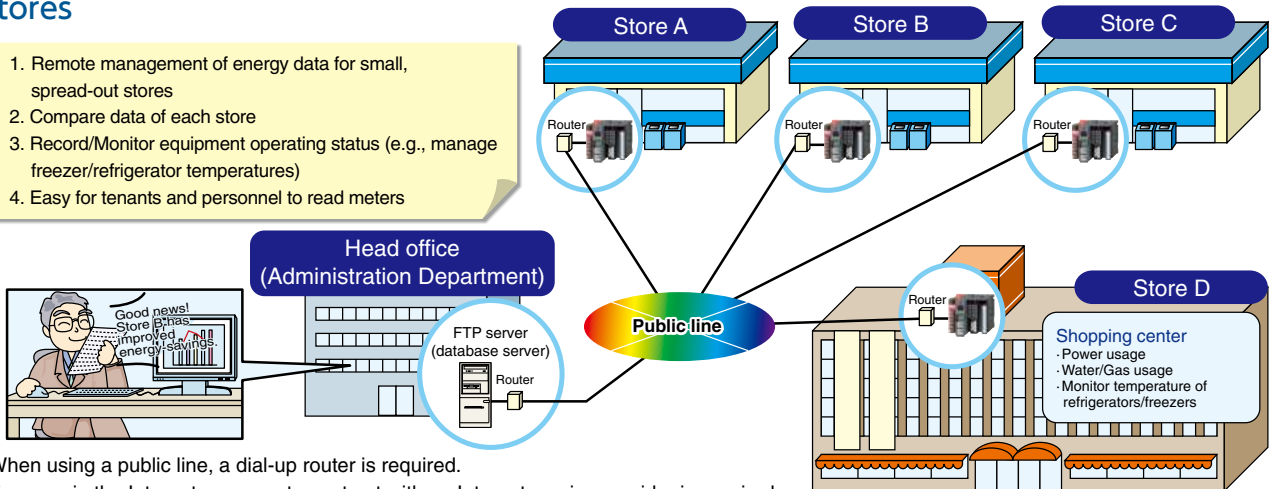


* When using a public line, a dial-up router is required.

* For use via the Internet, a separate contract with an Internet service provider is required.

Schools

- 1. Understand power consumption by facility (e.g., gymnasium) and equipment (e.g., transformer)
- 2. Monitor operating status of equipment distributed across a wide area
- 3. Save time and staff needed for meter-reading work
- 4. Record/Manage energy data

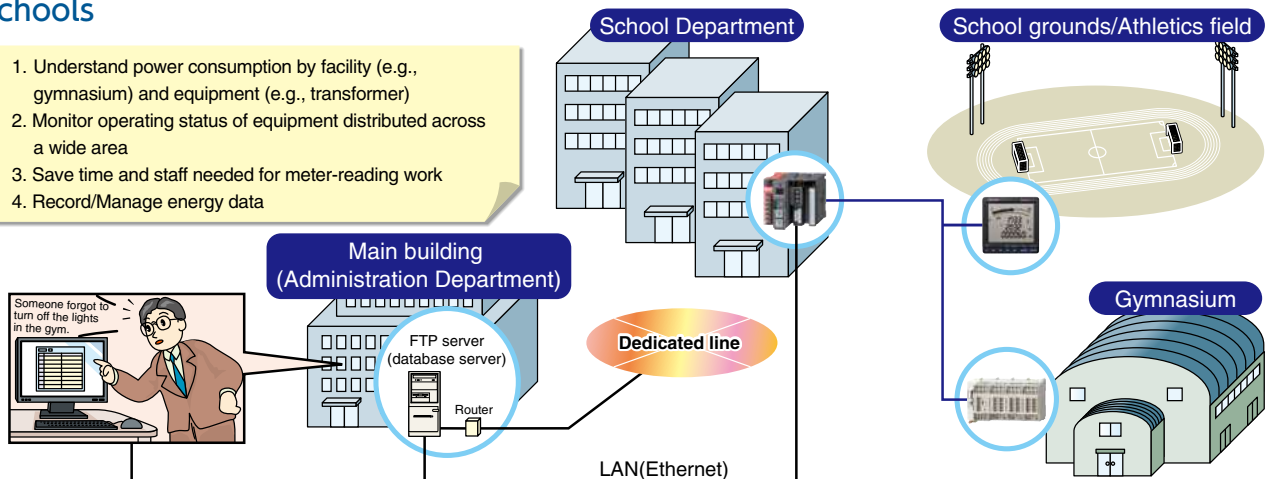

Main Unit Specifications

MES3-255C-EN front

7-segment LED display

Displays an error code when an error is detected.
In addition, in IP address display mode, the preset IP address is displayed at start-up.

USB interface

Not used.

LAN interface CH1

Use connected to a computer network.

LAN interface CH2


Use when connected to a programmable controller network, MITSUBISHI GOT, MODBUS® communication.

Power-supply terminal block

Connect power supply. (Note 1)

CC-Link terminal block

Connect CC-Link communication cable.

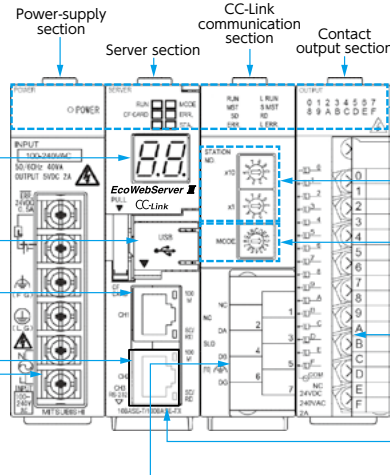

LED display

Display each status.

CC-Link station number setting switch

Set CC-Link station number.

CC-Link transmission speed setting switch

Set CC-Link transmission speed.

Contact output terminal block

Closed when conditions monitoring function conditions are met.
Connect external equipment such as buzzers and lamps.

LED display

Display each status.

MES3-255C-DM-EN front

7-segment LED display

Displays an error code when an error is detected.
In addition, in IP address display mode, the preset IP address is displayed at start-up.

USB interface

Not used.

LAN interface CH1

Use connected to a computer network.

LAN interface CH2


Use when connected to a programmable controller network, MITSUBISHI GOT, MODBUS® communication.

Power-supply panel

When you open the panel, you will see the power-supply connection terminal. (Note 1)

LED display

Display each status.

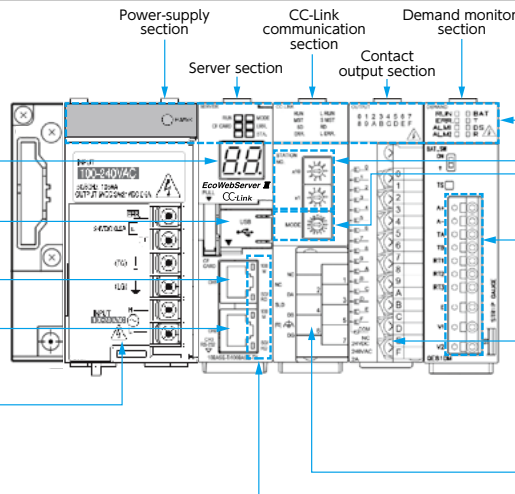

LED display

Display each status.

CC-Link station number setting switch

Set CC-Link station number.

CC-Link transmission speed setting switch

Set CC-Link transmission speed.

Demand monitor section connection terminal

Connect cable to pulse input, alarm output and control output for demand monitoring. (Note 2)

Contact output terminal block


Closed when conditions monitoring function conditions are met.
Connect external equipment such as buzzers and lamps.

CC-Link terminal block

Connect CC-Link communication cable.

Front surface (cover of Server section opened)/bottom surface (CC-Link transmission device)

Front surface (cover of Server section opened)

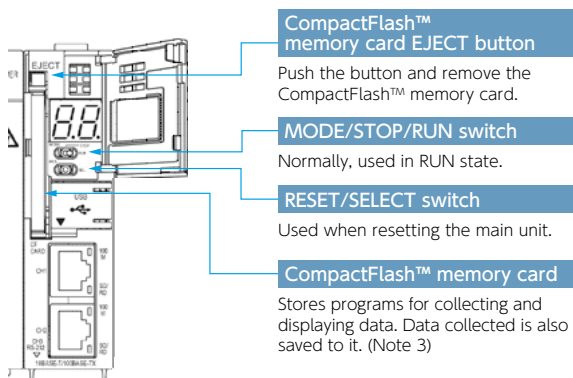

CompactFlash™ memory card EJECT button

Push the button and remove the CompactFlash™ memory card.

MODE/STOP/RUN switch

Normally, used in RUN state.


RESET/SELECT switch

Used when resetting the main unit.

CompactFlash™ memory card

Stores programs for collecting and displaying data. Data collected is also saved to it. (Note 3)

Bottom surface

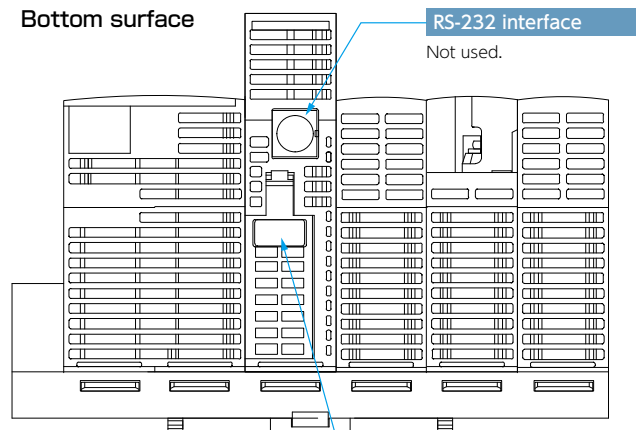

RS-232 interface

Not used.


Battery storage compartment

Store the battery.
Remove the cover and connect the connector. (Note 4)


- (Note 1) Connect to AC100–240V (+10%, –15%) 50/60Hz (±5%). Do not connect to a power supply other than that specified as this may cause an accident.
- (Note 2) A separate power supply is required for the demand monitor section when using. When using the main device, AC100–240V (+10%, –15%) 50/60Hz power is required for the demand monitor connector terminals V1, V2. It is possible to connect power from the power-supply module.
- (Note 3) CompactFlash™ memory cards are used in a constantly attached state. If they are removed while the power is on or the memory card is being accessed, this product will malfunction.
- When removing the card from the memory card slot, be sure to place the RESET/SELECT switch in the SELECT position and remove it only after turning off the power supply and the CF CARD LED has turned off.
 - Do not use the CompactFlash™ memory card with any other product. This could corrupt the internal data.
 - Do not insert a CompactFlash™ memory card other than the one included in the package in this device. If a different card is inserted, the system will not operate correctly.
- (Note 4) Be sure to exchange the battery within three minutes after turning off the power. If more than three minutes passes after the battery is removed, the final one hour of data may be lost or the clock may initialize. (Data or configuration settings from more than one hour before will not be initialized). If the clock initializes, please set again after backing up the data. Refer to the operating manual (hardware edition) for the battery replacement procedure.

Model: MES3-255C-EN, MES3-255C-DM-EN


Power-supply section

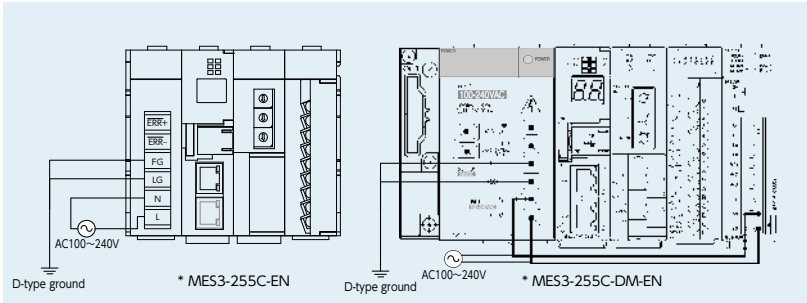


Server communications section (LAN interface)

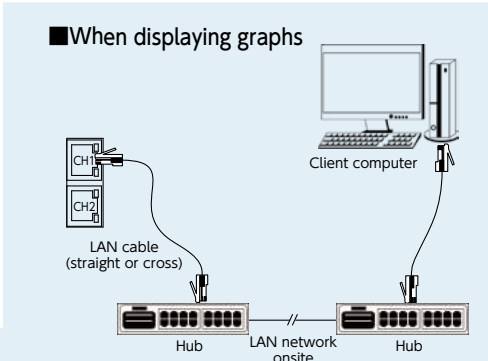


Connecting point output section

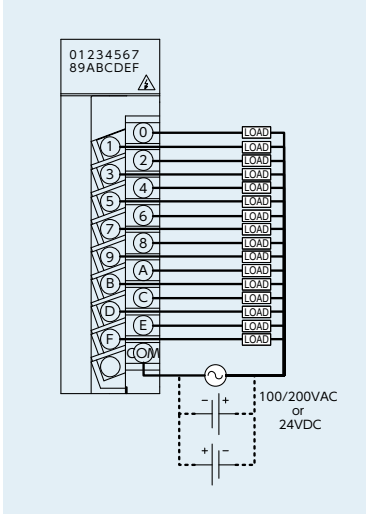


■ When setting (CH1)

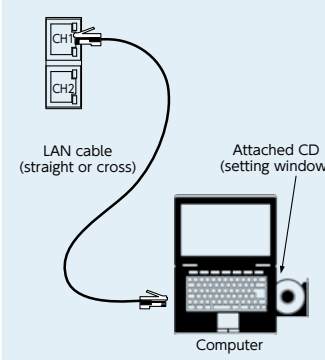

■ When connecting the PLC (CH2)

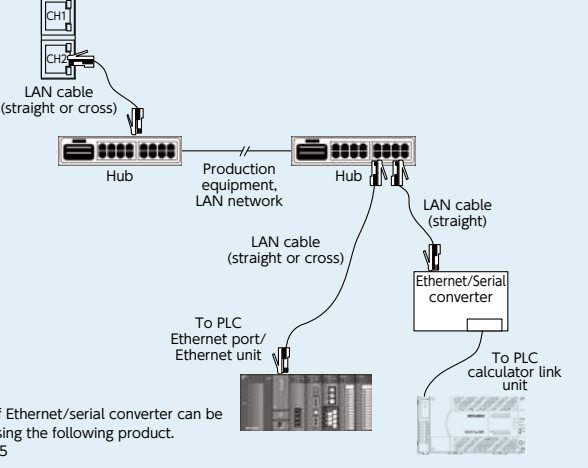


CC-Link communication section

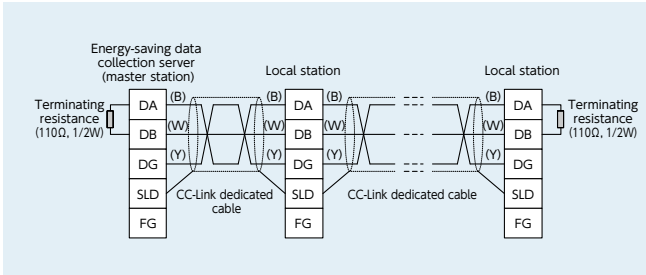

Demand monitor section

(1) Where the transaction meter of the multi-measuring power demand meter is 10,000pulse/kWh

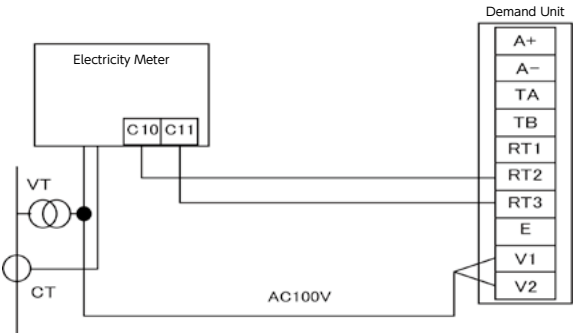

Function Comparison/System Environment

Functions

Product Name		MES3-255C-EN	MES3-255C-DM-EN		
Demand function		—	○		
Connection device	CC-Link terminal device	Number of remote I/O stations≤64, Number of remote device stations≤42, Number of local stations≤26			
	MODBUS® terminal device	Number of MODBUS® TCP terminals≤255 Number of MODBUS® RTU terminals≤31 for each gateway Number of total MODBUS® terminals≤255			
	mitsubishi PLC, GOT	MC protocol connection (LAN CH2 used) * device read/write CC-Link unit (local) connection * device read			
Number of measuring points	Measuring points	255 points			
	Number of operation measuring points	32 points (includes 255 measuring points)			
	Virtual measuring points	128 points			
	Specific consumption measuring points	64 points			
	Connection point output	32 points			
Demand monitoring	Receiving demand	—	2 points (fixed) whole day, timeframe 1-10		
	Receiving electric energy	—	2 points (fixed) whole day, timeframe 1-10		
Data saving function * CSV format	Zoom (every 1min) data	62-day amount			
	Zoom (every 5min) data	14-day amount			
	Daily data (on the hour or every 30min)	186-day amount			
	Monthly data (specified time (00min) once a day)	60-month amount			
	Yearly data (specified time (00min) once a month)	5-year amount			
	Virtual measuring point data (daily)	186-day amount			
	Virtual measuring point data (monthly)	60-month amount			
	Virtual measuring point data (yearly)	5-year amount			
	Specific consumption measuring point data (daily)	186-day amount			
	Specific consumption measuring point data (monthly)	60-month amount			
	Specific consumption measuring point data (yearly)	5-year amount			
	Equipment data (daily)	186-day amount			
	Operating history data	64KB×4 files			
	System log	256KB×8 files			
	Demand data (daily)	—	186-day amount		
Demand data (monthly(daily maximum))	—	60-month amount			
Demand data (yearly(monthly maximum))	—	5-year amount			
Demand alarm/Control log	—	128KB×62 files			
Display function	Real-time	Demand monitor	—	<ul style="list-style-type: none"> • Displays current time limit demand load curve • Displays graph of same day demand results 	
		Current value monitor	The current value of the specified measuring points are displayed in the units registered for groups and display lists Displays differential display mode function/differential values for specified measuring points (time differential: amount used from previous hour to present time, daily differential/monthly differential: amount used from previous summary time to present)		
		Connection point output monitor	Displays connecting point output status		
	Graph display	Demand trend graph	—	Displays demand trend graph	
		Measuring point comparison graph	Displays comparison of multiple measuring point data for specified display intervals/time displayed		
		Daily comparison graph	Displays comparison of specified measuring points for desired date		
		Specific consumption graph	Displays graph after dividing energy volume by number produced		
	Equipment graph	Displays graph of equipment efficiency, number of defects and equipment energy volume			
Data file	Download measuring point data, virtual measuring point data, specific consumption data, equipment data, operating history data, system log, demand data *, alarms/control log * (*only for products with demand monitoring functions)				
Equipment values list	Displays measuring points, connection point output and content of email notifications set for EcoServerIII				
Monitoring functions	Email notification function	Transmits main unit error notifications, periodic notifications, upper/lower limit notifications, operating status notifications, specific consumption objective value notifications, energy plan value notifications and demand notifications * to the specified SMTP Server (*only for products with demand monitoring functions)			
	Connection point output	Outputs connection points for EcoWebServerIII connection point output module or combined CC-Link input/output module			

Hardware specification

Product Name		MES3-255C-EN	MES3-255C-DM-EN	
Power supply section	Auxiliary power input	100 to 240 V AC (+10%, -15%) 50/60 Hz (±5%)		
	Consumption VA	19 VA (at 110 V AC)	34 VA (at 110 V AC)	
		25 VA (at 220 V AC)	46 VA (at 220 V AC)	
	Inrush current	20 A, 8 ms or less		
	Allowable momentary power interruption time	20 ms or less (100 V AC or higher)		
	Withstand voltage	Between all input/LG terminals and all output terminals		
		2,830V rms AC/3 cycles (altitude: 2,000 m)		
	Insulation resistance	10 MΩ or more by 500 V DC insulation tester at the same locations as for withstand voltage		
	Operating ambient temperature&humidity	0 to 55 °C 5 to 95% RH , Daily average temperature exceeds 35°C		
	Storage ambient temperature&humidity	-25 to +75 °C 5 to 95% RH		
Installation area	Inside a control panel			
Weight	0.9 kg (Without demand)	1.25kg (With demand)		
Fuse	Built-in (unreplaceable by user)			
Server section	Ethernet	Interface: 2 ports (10BASE-T 100BASE-TX)		
		Transmission method: Baseband		
		Cascade connection limit: 4 levels max. (10BASE-T), 2 levels max. (100BASE-TX)		
		Max. segment length: 100 m		
		Compatible connector: RJ45		
	Clock accuracy	0 to 55 °C	Per day: -10.89 to +8.64 sec	Additional difference of ±0.5 seconds can be produced during power outages.
		25 °C	Per day: -4.32 to +5.25 sec	
	Power-interruption backup	Backup data	Clock	
			Measured data for the last 1 hour	
			Backed up by nonvolatile memory (CompactFlash memory card).	
Battery		Setting values		
		Measured data except for the last 1 hour		
		Type: Lithium manganese dioxide primary battery Initial voltage: 3.0 V Nominal current: 1800 mAh Life when in storage: 5 years at room temperature (actual service value)		
Contact output section	Number of output points	16 points		
	Contact output	A switch type		
	Insulation method	Relay insulation		
	Rated switching voltage/current	24 V DC 2 A (resistance load)		
		240 V AC 2 A (COSφ=1) /1 point, 8 A/1 common		
	Min. switching load	5 V DC, 1 mA		
	Max. switching load	264 V AC 2 A, 125 V DC 2 A		
Life	Mechanical: 20,000,000 times or more, electrical: 100,000 times or more at rated switching voltage/current			
Demand surveillance section	Pulse input/Time limit synchronism signal input	Dedicated detection CT	Number of pulses: 50000 pulses/kWh Distance: 100 m or below (dedicated cable)	
		Pulse detector	Signal type: No-voltage normally-open contact/Open collector	
	Power frequency input	Number of pulses: 50000, 12500, 10000, 2000		
		Pulse conditions: Pulse width, Pulse interval		
	Contact output (1 point)	100-110 V AC, -15% +10%, 50/60 Hz		
Standard specification		CE,UL *KC, Chinese RoHS is for profit.		

Recommended system environment

[PC]

Item	Description
OS (basic software)	Microsoft® Windows® 7 Professional (32-bit or 64-bit) (English version) SP1 Microsoft® Windows® 8.1 Pro (32-bit or 64-bit) (English version) Microsoft® Windows® 10 Pro (32bit, 64bit) (English version)
CPU	1 GHz or higher Pentium® processor, or compatible microprocessor (DOS/V compatible)
Memory *1	1GB or more
Hard disk *1	Save data collected by EcoWebServerIII to PC, enough disk space for the data is required
CD drive	One or more drives (required to install the setting software)
Display resolution	1,280 × 1,024 pixels or more
Display color	65,536 colors or more
Input device	A mouse and a keyboard
English input system	The system included in OS (English version only)
External interface	10BASE-T / 100BASE-TX Memory card reader (when writing / reading / confirming a project via drive by setting software)
Web browser *2	Microsoft Internet Explorer® 9 (32-bit), 10 (32-bit), or 11 (32-bit) Microsoft Edge Google Chrome

*1 Note that the required memory and free space of hard disk vary depending on the system environment. *2 Operation check for Microsoft Edge is done in version 38. Operation check for Google Chrome is done in version 54.

[Tablet *3]

Item	Description
OS	Android6.0 iOS10
Web browser *4	Google Chrome Safari


*3 Tablet is only for browsing the web screen. Setting software cannot be used on the tablet. *4 Operation check for Google Chrome is done in version 54. Operation check for Safari is done in version 10.

External Diagram/Bundled Products List


External dimensions

Unit : mm

MES3-255C-EN

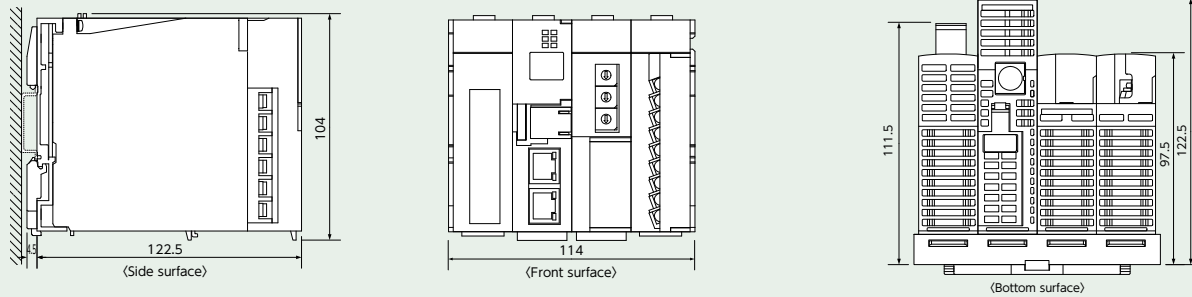


MES3-255C-DM-EN

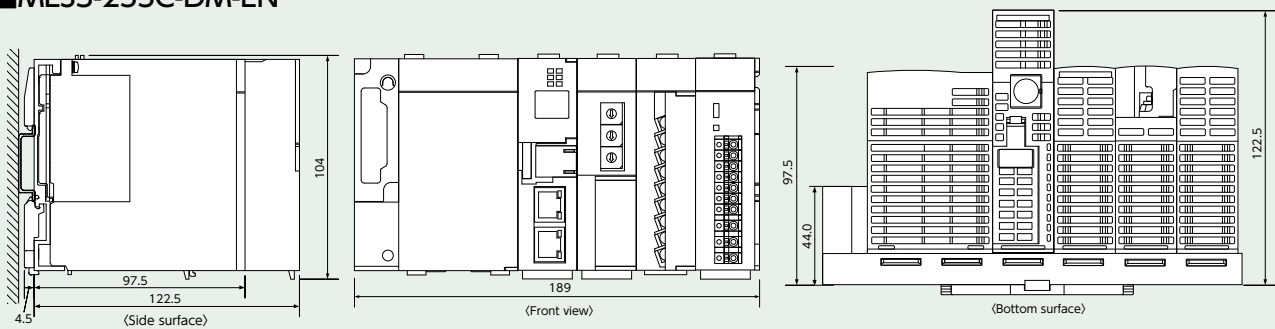


Peripheral installation conditions

MES3-255C-EN

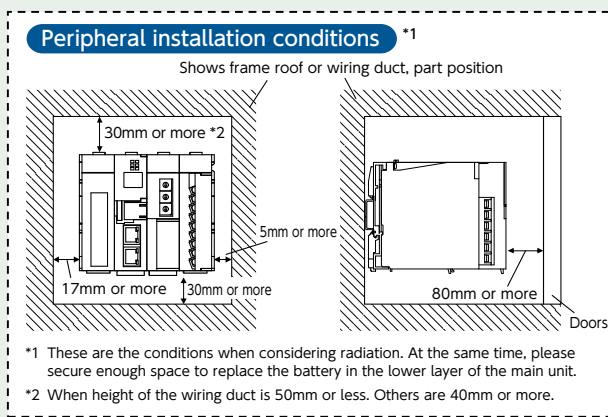

MES3-255C-DM-EN

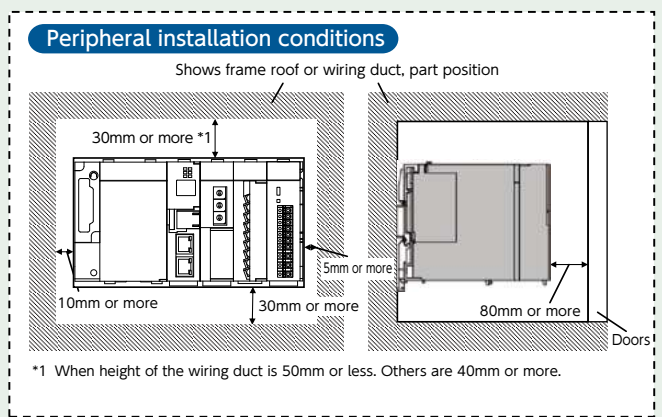

Bundled Products List

Product Name	CC-Link communication product	
	MES3-255C-EN	MES3-255C-DM-EN
Energy-saving Data Collection Server (main unit)	1	1
CompactFlash™ memory card (software)	1	1
Setup software (CD-R)/operating manual collection	1	1
Battery (installed in lower surface of main unit battery section) *1	1	1
Frame attachment screw	4 (M4×12)	4 (M4×14)
CC-Link terminal resistance (black: 110Ω/2W) (white: 130Ω1/2W)	Black: 2 White: 2	Black: 2 White: 2
IEC rail attachment adapter	Small 2	Large 2
IEC rail attachment screw (M5 x 10)	2	2
IEC rail attachment corner washer	2	2
IEC rail attachment stop metal clamp	2	2
Operating manual hardware edition	1	1
LAN port cap	2	2

*1 To purchase a replacement battery (model name: Q6BAT), inquire at the dealership where you purchased the main product.

EcoMeasureIII Daily Monthly Report Software

This software supports the specific consumption analysis graph and ledger preparation of daily reports, monthly reports and annual reports from CSV files collected and output by the Mitsubishi Electric EcoWebServerIII Energy-saving Data Collection Server.

* The supporting product version, EcoWebServerIII with demand monitoring function, for EcoMeasureIII, will be released soon.

●Features

- (1) Easily create daily, monthly and annual reports.
 - Ledger prepared ledger is saved as an Excel file in user-designated place.
- (2) Easily perform specific consumption management as the index of energy-saving activities.
 - Possible to manually input production volume and perform specific consumption management of energy information from EcoWebServerIII.
- (3) Easily collect data.
 - CSV files stored in EcoWebServerIII can be downloaded with simple operations.

●Product Appearance



●Specifications

Item		Specifications		
Model name		MES3-SW1-DR-FR		
Language		English, Chinese *1		
Connection devices	Number of units	8 units maximum (combination of following target devices)		
	Target devices	EcoWebServerIII		
Number of virtual measurement points		Maximum 95 points (Total of 95 points including virtual measurement points for calculating measurement management points and virtual measurement points for input.) * Four arithmetic operations of up to 64 measurement management points (including constants) can be registered in the virtual measurement points for calculation.		
Number of virtual measurement point groups		Maximum five groups *Addition/Subtraction calculations for up to 32 virtual measurement points can be registered in the virtual measurement point groups.		
Ledger creation function	Ledger creation	Daily report creation, monthly report creation, annual report creation		
	Maximum number of items	The daily, monthly and annual reports can have up to 2,250 output items.		
	Calculation items	Analog (including specific consumption)	Maximum, minimum, average	
		Pulse	Total, maximum, minimum, average	
		Demand	Maximum	
Number of specific consumption	Maximum 100 points			
Number of licenses (number of computers installed in)		• 1 license per 1 client • Hardware key attached (USB) (1 unit)		

*1 It needs to start in the Chinese version of Microsoft operating system (OS).

●Operating environment

The system environment necessary for this software to operate correctly is as shown below.

Item	Details
OS (basic software)	English version of Microsoft Windows Vista (32 bits) (SP2) Business English version of Microsoft Windows 7 (32 bits/64 bits) Professional English version of Microsoft Windows 8.1 Pro (32bits/64bits) English version of Microsoft Windows 10 Pro (32bits/64bits)
Required software	English version of Microsoft Excel 2007 SP3 / 2010 SP1 (32 bits) 2013 SP1 (32bits) / 2016 (32bits)
CPU	For Windows Vista or Windows 7 or Windows 8.1 or Windows 10: As recommended for the operating system
Memory *1	As recommended for the operating system
Hard disk *1	Software: Approx. 100 MB or more, Data: 8 GB or more *2
CD-ROM drive	1 drive (for installing the software)
LAN	10/100/1000BASE-T x1
USB connector (Type A)	1 connector (for connecting the hardware key)
Display resolution	800×600 pixels or more
Display color	256 colors or more

*1 Note that the required memory and available hard disk space may vary depending on the system environment.

*2 Shows the capacity required when the product is used with 8 subsystems connected at the maximum.

[Daily Report]

[Monthly Report]

[Annual Report]

1. Safety Precautions to be Followed at all Times

Operating Environment/Conditions

Using this product in any of the following environments may cause a malfunction or shorten service life. Do not use in environments where:

- | | |
|---|---|
| <ul style="list-style-type: none"> ● Ambient temperature outside the range of 0 - 55°C ● Daily average temperature exceeds 35°C ● Relative humidity outside the range of 5 - 95% or where condensation occurs ● Altitude is higher than 2,000m above sea level ● Presence of excessive dust, corrosive gas, salt-saturated air or oily smoke | <ul style="list-style-type: none"> ● Unit is subject to excessive vibration or physical shock ● Unit is exposed to rain or drops of water ● Unit is exposed to direct sunlight ● Pieces of metal or inductive substances nearby ● Presence of strong electromagnetic field or excessive external electrical noise interference |
|---|---|

Installation/Mounting

Be sure to read the user's manual before installing/mounting the product.

CAUTION

- For safety, unit installation and all wiring connections should be performed by a qualified electrician.
- Be careful of sharp, metal edges; they may cause injury.
- When tightening screws or connecting wiring, be sure that small particles or cut pieces of electrical wiring do not get inside the unit.
- Check the wiring diagram carefully before making connections. Incorrect connections may cause a malfunction, fire or electrical shock.
- Do not perform wiring work using live circuits. Doing so may cause a malfunction, fire or electrical shock.
- Use electrical wires of appropriate size. Not doing so may cause a fire due to the possible generation of heat.
- Use a solderless terminal that matches the size of the electrical wire. Not doing so may result in disconnected wires or improper electrical contact, thereby causing a malfunction, failure, burnout or fire.

Location	Wire size	Compatible solderless terminal
Power-supply terminal block	0.75 - 2 mm ²	RAV1.25-3.5 RAV2-3.5
CC-Link communication terminal block	CC-Link Ver.1.10-compatible dedicated cable	R1.25-3
Contact output terminal block	0.3 - 0.75 mm ²	R1.25-3 (cannot use solderless terminal with sleeve)
Demand monitor block	0.5 - 1.3 mm ²	TGV TC-1.25-11T equivalent (Nichifu Co., Ltd.)

- Be sure to check that all screws have been tightened. Not doing so may cause a malfunction, failure, burnout or fire.
- Tighten screws to the specified torque. Excessive tightening may cause damage to the terminal and/or screws. Failure to tighten properly may cause a malfunction, fire or electrical shock.
- When using lines from demand monitor terminal block, twist the heads of the fine lines together so they do not spread before attachment.

Location	Tightening torque	Location	Tightening torque
Terminal screws for power-supply terminal block (M3.5 screw)	0.8 - 1.0·Nm	Terminal screws for contact output terminal block (M3 screw)	0.42 - 0.58N·m
Terminal screws for CC-Link communication terminal block (M3 screw)	0.42 - 0.58N·m	Mounting screws for contact output terminal block (M3.5 screw)	0.66 - 0.89N·m
Mounting screws for CC-Link communication terminal block (M3.5 screw)	0.66 - 0.89N·m	Unit attachment screws (M3×12 screws)	0.36 - 0.48N·m

- Be sure to check that the terminal cover has been attached. Not doing so may result in electrical shock.
- To prevent induction noise, control wires and communication cables should be installed as far as possible from power lines (wiring should be separated by a distance of at least 100mm).
- Avoid installation inside a panel where high-voltage equipment is used. Use a surge protector for equipment that tends to generate electrical noise.
- During actual use conditions, use Class-D grounding (dedicated grounding) for "FG".
- Do not connect the FG terminal to a box (ground) when conducting the withstand voltage test or insulation resistance test.

CC-Link

- Connect both ends of the CC-Link communication cable shield line to the SLD terminal of each unit.
Each unit's SLD and FG are connected inside of the modules.
Please make sure to insulate the shield with vinyl tape or similar.

Preparations Before Use

- Be sure that the installation location complies with the operating environment and conditions.
- This product requires setting before use. If setting is not done properly, a malfunction may occur.
- Confirm the power-supply rating of the product.
- Remove the dust-resistant seal after completing installation and wiring construction.
Not doing so may cause a malfunction due to the possible generation of heat.
- This product is equipped with a lithium battery. As the battery is not connected at the time of shipping, please connect it before use.

Regarding Use

- Use only within rating range specified in the product's instruction manual. Not doing so may cause a malfunction, failure, fire or burnout.
- An IP address and other settings are required to connect this product to a network (Ethernet). Before use, use the accompanying setup software to perform network-related settings such as setting the IP address.
- The factory default settings are:

IP address = 192.168.10.1, subnet mask = 255.255.255.0, gateway = none

No setting changes are required for direct connection to a computer.

- This product is equipped with a built-in clock. Before use, use the accompanying setup software to set the current date and time.
- Before use, be sure to check that there are no live circuits or bare wires in the vicinity of the product.
If a live circuit or bare wire is found during use, stop operation immediately and take appropriate measures, such as providing protective insulation.
- Please consult with a Mitsubishi Electric sales representative when considering using this product with machinery or systems designed for specialized use such as nuclear power, electric power, aerospace/outer space, medical, or passenger transportation vehicles. (To contact a sales representative, please refer to the end of this document.)
- If the power supply is turned on immediately after turning it off (within 5sec), incoming current may exceed the stipulated value (less than 2ms). Please wait more than 5sec before turning the power supply on after turning it off.



- Do not disassemble or modify product. Doing so may cause a failure, electrical shock or fire.
- A seal sheet has been placed on the side of this product. If the seal sheet has been removed from the product, the product is out-of-service, such as down for maintenance or malfunction analysis.

Maintenance/Inspection

- Do not disassemble or modify any part of the product. Doing so may cause failure, malfunction, injury or fire.
- Do not touch terminals when current is flowing. Doing so may cause electrical shock, malfunction or failure of product operation.
- When cleaning the product or tightening attachment screws, please make sure to turn off the exterior power supply, cutting off power to the input power supply. Not doing so may cause malfunction or failure of product operation.
- Use a soft, dry cloth to wipe dust and dirt from the surface of the product.
- Do not let chemicals touch the surface for long periods of time. Clean product surface using pre-treated wipes. Do not use benzene, thinner or forms of chemical cleansers.
- Conduct inspections as follows to ensure correct use of the product and a long service life.
 - <Daily inspection or check at least once or twice every six months> Check for: ① Product damage, ② LED display abnormalities, ③ Abnormal noises, odors and heat.
 - <Check once a year> ④ Confirm if mounting screws or terminal block wire connections have come loose (be sure to turn off the power before performing inspections).
- The lithium battery in the server block needs to be replaced when the battery charge is depleted (red BAT LED lamp on server block will turn on) or every three years.



- Be sure to turn off the power before checking for loose connectors, mounting screws and terminal block wire connections.
- If a power outage occurs when the battery charge is weak, the clock or data may be initialized. Please reset when required, and then change the battery.


Storage

- When storing this product, turn off the power supply, disconnect the wiring and place it in a plastic bag.
- When turning the power supply off for long periods of time, disconnect the connector for the battery. (The cumulative power outage compensation time of the battery is up to 13,700hr (1.57yr). Using the battery outside of the warranty period may result in losing measurement data.)
- Storing the product in one of the environments described below may cause a malfunction or shorten service life. Do not store the product for long periods of time in environments where:

- | | |
|--|---|
| <ul style="list-style-type: none"> ● Ambient temperature is outside the range of -25 - +75°C ● Average daily temperature exceeds 35°C ● Relative humidity is outside the range of 5 - 95% or where condensation occurs ● Altitude exceeds 2,000m ● Presence of excessive dust, corrosive gas, salt-saturated air or oily smoke. | <ul style="list-style-type: none"> ● Unit is subjected to excessive vibration or physical shock. ● Unit is exposed to rain or drops of water ● Unit is exposed to direct sunlight ● Presence of pieces of metal or inductive substances nearby ● Presence of a strong electromagnetic field or excessive external electrical noise interference. |
|--|---|

Disposal

- Dispose of this product following relevant laws and/or guidelines regarding disposal and cleaning (Waste Management Law).
- This product is equipped with a lithium battery. Please dispose of it according to relevant local laws and/or guidelines.



- The lithium battery may still have an electrical charge after it is removed. Store it separately from other metals, as contact with other metals may cause the generation of heat, rupture or fire.

QR Code displayed on product

- As the QR Code displayed on this product is used for production management, it is not for the customer to use. There is no guarantee that the QR Code can be read by a commercial code reader, etc.

Warranty

- Regarding technical inquiries or questions regarding the product, please contact nearest Mitsubishi Electric dealership or distributor.
- Please consult with a Mitsubishi Electric sales representative when considering using this product with machinery or systems designed for specialized use such as nuclear power, electric power, aerospace/outer space, medical, or passenger transportation vehicles.
- This manual and equipment are shipped under strict quality control and product inspection. In the unlikely in case of any defect resulting from production processes, Mitsubishi Electric will replace the product. Please contact the dealership where the product was purchased. Please note, however, Mitsubishi Electric's warranty doesn't include replacement in the cases of failure and/or damage caused due to natural disasters or improper use.
- Please understand that Mitsubishi Electric will not bear the liability for any system problems caused by a customer or third party, legal issues, failure caused by improper use of or during use of the product, or damage caused by other defects.
- Mitsubishi Electric shall not bear the liability for any damage caused by reasons that are not the fault of the Company, loss of opportunity or loss of income suffered by a customer due to the occurrence of this product's failure, damage or secondary damage resulting from special reasons, regardless of whether or not it was foreseeable, accident compensation or other compensation for any damage caused to products other than those of Mitsubishi Electric, and other services.
- The free warranty period of this product shall be the shorter period, either one (1) year after purchase and delivery to the designated location, or 18 months after shipping from the Company factory (beginning from month and year manufactured). However, even during the warranty period, if repair is required due to one of the following causes, a fee shall be charged:
 - 1) improper use or 2) improper operation.
 Fee-based repairs are available after the end of the free warranty period.
- The free warranty period for repairs shall not be renewed.

Repairs at the time of failure/abnormality

- If any abnormality occurs in one of the products listed in this catalog, please read the section, "Trouble Shooting," in the instruction manual (operation version) to check for possible reasons of the problem. If there is no description matching the problem found, please contact nearest Mitsubishi Electric dealership.

2. Precautions for Use

Precautions Regarding Software Use

- Mitsubishi Electric does not guarantee or provide support for FTP server or SMTP server operations. Additionally, Mitsubishi Electric does not provide technical support for individual servers.
- Please be aware that Mitsubishi Electric does not provide network support. Please contact your network administrator.
- Please be aware that Mitsubishi Electric does not provide support regarding computer hardware, operating systems or operations. Please contact the manufacturer or administrator.

- When it is necessary to secure system safety against unauthorized access attempt from outside, please take measures by the users.

We shall not be held responsible against various problems generated by unauthorized access.

It is recommended to use by being cautious of the following.

- 1) Use LAN to avoid unauthorized access from outside.
- 2) When connecting to the Internet, take measures such as firewalls, VPN, etc.
- 3) Change the account information (login ID and password) from the default one. To avoid the login information from leaking, please setup them by noting the following.
 - Avoid easy to figure out phrases such as your name and date of birth, and simple sequence of numbers.
 - Set hard to figure out login ID and password consisting of 8 characters or more containing uppercase and lowercase alphabets, and numbers.

- After using the setup software to modify display settings (e.g., a measuring point name), be sure to close and restart the web browser. Not doing so may cause the changes not to take effect due to the web browser's caching function.



- For monitoring operating status, do not use measures such as inputting alarms that consider human safety or require an emergency response (fire alarm). Doing so may lead to an accident.

3. Trademarks


- Microsoft® Windows®, Windows Vista®, Windows®7, Windows®8.1, Windows®10, Internet Explorer® are trademarks or registered product trademarks of Microsoft Corporation in the U.S.A. and other countries.
- Java and all Java related trademarks and logos are registered trademarks of the Oracle Corporation and its subsidiaries and affiliates in the U.S.A. and other countries.
- CompactFlash™ and CompactFlash™ and CF are trademarks of SanDisk Corporation.
- Ethernet is a trademark of Xerox Corporation in the U.S.A.
- QR Code is a registered trademark of Denso Wave Incorporated in Japan.
- EcoServer is a registered trademark of Mitsubishi Electric Corporation.
- Other company names and product names are registered trademarks or trademarks of their respective companies.



Service Network

Country/Region	Corporation Name	Address	Telephone
Australia	Mitsubishi Electric Australia Pty. Ltd.	348 Victoria Road, Rydalmere, N.S.W. 2116, Australia	+61-2-9684-7777
Bangladesh	PROGRESSIVE TRADING CORPORATION	HAQUE TOWER, 2ND FLOOR, 610/11, JUBILEE ROAD, CHITTAGONG, BANGLADESH	+880-31-624307
	ELECTRO MECH AUTOMATION & ENGINEERING LTD.	SHATABDI CENTER, 12TH FLOOR, SUITES: 12-B, 292, INNER CIRCULAR ROAD, FAKIRA POOL, MOTIJHEEL, DHAKA-1000, BANGLADESH	+88-02-7192826
Belarus	Tehnikon	Oktyabrskaya 19, Off. 705, BY-220030 Minsk, Belarus	+375 (0)17 / 210 46 26
Belgium	Koning & Hartman B.V.	Woluwelaan 31, BE-1800 Vilvoorde, Belgium	+32 (0)2 / 2570240
Brazil	Mitsubishi Electric Do Brasil Comercio E Servicos Ltda.	Av. Adelino Cardana, 293 -21 and. - Bethaville, 06401-147, Barueri/SP - Brasil	+55-11-4689-3000
Cambodia	DHINIMEX CO.,LTD	#245, St. Tep Phan, Phnom Penh, Cambodia	+855-23-997-725
Chile	Rhona S.A.	Vte. Agua Santa 4211 Casilla 30-D (P.O. Box) Vina del Mar, Chile	+56-32-2-320-600
China	Mitsubishi Electric Automation (China) Ltd.	Mitsubishi Electric Automation Building, No.1386 Hongqiao Road, Shanghai, 200336	+86-21-2322-3030
	Mitsubishi Electric Automation (China) Ltd. North China Branch	9/F, Office Tower1 Henderson Centre 18 Jianguomennei Dajie DongCheng district Beijing 100005	+86-10-6518-8830
	Mitsubishi Electric Automation (China) Ltd. NorthEast China Branch	Room2302, President Building Tower C, No.69 Heping North Avenue, Heping District, Shenyang, 110003	+86-24-2259-8830
	Mitsubishi Electric Automation (China) Ltd. South China Branch	Room 2512--2516, Great China International Exchange Square, Jintian Rd.S., Futian District, Shenzhen, 518034	+86-755-2399-8272
	Mitsubishi Electric Automation (China) Ltd. South China Branch	Room 1609, North Tower, The Hub Center, No.1068, Xing Gang East Road, Haizhu District, GuangZhou, China 510335	+86-20-8923-6730
	Mitsubishi Electric Automation (China) Ltd. SouthWest China Branch	1501, 1502, 1503, 15F, Guang-hua Centre, Block C, NO.98 Guang Hua North 3th Road Chengdu, 610000	+86-28-8446-8030
	Mitsubishi Electric Automation (Hong Kong) Ltd.	20/F, Cityplaza One, 1111 king's Road, Taiiko shing, Hong Kong	+852-2510-0555
Colombia	Proelectrico Representaciones S.A.	Carrera 42 # 75-367 Bod 109 Itagui Colombia	+57-4-4441284
Czech Republic	AUTOCONT CONTROL SYSTEMS S.R.O	Technologická 374/6, CZ-708 00 Ostrava - Pustkovec	+420 595 691 150
Denmark	BEUER ELECTRONICS A/S	LYKKEGARDSVEJ 17, DK-4000 ROSKILDE	+45 (0)46/ 75 76 66
Egypt	Cairo Electrical Group	9, Rostom St. Garden City P.O. Box 165-11516 Maglis El-Shaab, Cairo - Egypt	+20-2-27961337
France	Mitsubishi Electric Europe B.V.	25, Boulevard des Bouvets, F-92741 Nanterre Cedex	+33 (0) 1 / 55 68 55 68
Germany	Mitsubishi Electric Europe B.V.	Mitsubishi-Electric-Platz 1, 40882 Ratingen, Germany	+49 (2102) 4860
Greece	KALAMARAKIS - SAPOUNAS S.A.	IONIAS & NEROMILOU STR., CHAMOMILOS ACHARNES, ATHENS, 13678 Greece	+30-2102 406000
	UTEKO	5, MAVROGENOUS STR., 18542 PIRAEUS, Greece	+30-211-1206-900
Hungary	Meltrade Ltd.	Fertő utca 14. HU-1107 Budapest, Hungary	+36 (0)1-431-9726
India	Mitsubishi Electric India Private Limited	2nd Floor, Tower A&B, Cyber Greens, DLF Cyber City, DLF Phase-III, Gurgaon - 122 022 Haryana, India	+91-124-4630300
	PT.Mitsubishi Electric Indonesia	Gedung Jaya 8th floor, JL. MH. Thamrin No.12 Jakarta Pusat 10340, Indonesia	+62-21-3192-6461
Indonesia	P. T. Sahabat Indonesia	P.O.Box 5045 Kawasan Industri Pergudangan, Jakarta, Indonesia	+62-(0)21-6610651-9
Ireland	Mitsubishi Electric Europe B.V.	Westgate Business Park, Ballymount, IRL-Dublin 24, Ireland	+353 (0)1-4198800
Israel	Gino Industries Ltd.	26, Ophir Street IL-32235 Haifa, Israel	+972 (0)4-867-0656
Italy	Mitsubishi Electric Europe B.V.	Viale Colleoni 7, I-20041 Agrate Brianza (MI), Italy	+39 039-60531
Kazakhstan	Kazpromavtomatika	ul. Zhambyla 28, KAZ - 100017 Karaganda	+7-7212-501000
Korea	Mitsubishi Electric Automation Korea Co., Ltd	9F Gangseo Hangang xi-tower, 401 Yangcheon-ro, Gangseo-gu, Seoul 07528 Korea	+82-2-3660-9572
Laos	AROUNKIT CORPORATION IMPORT-EXPORT SOLE CO.,LTD	SAPHANMO VILLAGE. SAYSETHA DISTRICT, VIENTIANE CAPITAL, LAOS	+856-20-415899
Lebanon	Comptoir d'Electricite Generale-Liban	Cebaco Center - Block A Autostrade Dora, P.O. Box 11-2597 Beirut - Lebanon	+961-1-240445
Lithuania	Rifas UAB	Tinklu 29A, LT-5300 Panevezys, Lithuania	+370 (0)45-582-728
Malaysia	Mitric Sdn Bhd	No. 5 Jalan Pemberta U1/49, Temasya Industrial Park, Glenmarie 40150 Shah Alam, Selangor, Malaysia	+603-5569-3748
	Flexible Automation System Sdn Bhd	60 Jalan USJ/10/1B 47620 UEP Subang Jaya Selangor Darul Ehsan, Malaysia	+603-5633-1280
Malta	ALFATRADE LTD	99 PAOLA HILL, PAOLA PLA 1702, Malta	+356 (0)21-697-816
Maroco	SCHIELE MAROC	KM 7, 2 NOUVELLE ROUTE DE RABAT AIN SEBAA, 20600 Casablanca, Maroco	+212 661 45 15 96
Mexico	Mitsubishi Electric Automation, Inc.	Mariano Escobedo 69, Col. Zona Industrial, Tlalnepantla, MEX - 54030 - MX	+55-3067-7500
Myanmar	Peace Myanmar Electric Co.,Ltd.	NO137/139 Botahtaung Pagoda Road, Botahtaung Town Ship 11161, Yangon, Myanmar	+95-(0)1-202589
Nepal	Watt&Volt House	KHA 2-65, Volt House Dillibazar Post Box:2108, Kathmandu, Nepal	+977-1-4411330
Netherlands	Imtech Marine & Offshore B.V.	Sluisjesdijk 155, NL-3087 AG Rotterdam, Netherlands	+31 (0)10-487-19 11
North America	Mitsubishi Electric Automation, Inc.	500 Corporate Woods Parkway, Vernon Hills, IL 60061 USA	+847-478-2100
Norway	Scanelec AS	Leirvikasen 43B, NO-5179 Godvik, Norway	+47 (0)55-506000
Middle East Arab Countries & Cyprus	Comptoir d'Electricite Generale-International-S.A.L.	Cebaco Center - Block A Autostrade Dora P.O. Box 11-1314 Beirut - Lebanon	+961-1-240430
Pakistan	Prince Electric Co.	2-P GULBERG II, LAHORE, 54600, PAKISTAN	+92-42-575232, 5753373
	AL-KAMAL GROUP	OFFICE NO.7&8, 1ST FLOOR, BARKAT ALI KHAN CENTER, 101, CIRCULAR ROAD, LAHORE. PAKISTAN	+92-42-37631632
Philippines	Edison Electric Integrated, Inc.	24th Fl. Galleria Corporate Center, Edsa Cr. Ortigas Ave., Quezon City Metro Manila, Philippines	+63-(0)2-634-8691
Poland	Mitsubishi Electric Europe B.V. Polish Branch	Krakowska 50, 32-083 Balice, Poland	+48 (0) 12 630 47 00
Republic of Moldova	Intehsis SRL	bld. Traian 23/1, MD-2060 Kishinev, Moldova	+373 (0)22-66-4242
Romania	Sirius Trading & Services SRL	RO-060841 Bucuresti, Sector 6 Alea Lacul Morii Nr. 3	+40-(0)21-430-40-06
Russia	Mitsubishi Electric Europe B.V. Moscow Branch	52, bld. 3 Kosmodamianskaya Nab. 115054, Moscow, Russia	+7 495 721-2070
Saudi Arabia	Center of Electrical Goods	Al-Shuwayer St. Side way of Salahuddin Al-Ayoubi St. P.O. Box 15955 Riyadh 11454 - Saudi Arabia	+966-1-4770149
Singapore	Mitsubishi Electric Asia Pte. Ltd.	307 Alexandra Road, Mitsubishi Electric Building, Singapore 159943	+65-6473-2308
Slovakia	PROCONT, Presov	Kupelna 1/, SK - 08001 Presov, Slovakia	+421 (0)51 - 7580 611
	SIMAP	Jana Derku 1671, SK - 91101 Trencin, Slovakia	+421 (0)32 743 04 72
Slovenia	Inea RBT d.o.o.	Stegne 11, SI-1000 Ljubljana, Slovenia	+386 (0)1-513-8116
South Africa	CBI-electric: low voltage	Private Bag 2016, ZA-1600 Isando Gauteng, South Africa	+27-(0)11-9282000
Spain	Mitsubishi Electric Europe B.V. Spanish Branch	Carretera de Rubí 76-80, E-08190 Sant Cugat del Vallés (Barcelona), Spain	+34 (0)93-565-3131
Sweden	Euro Energy Components AB	Järnvägsgatan 36, S-434 24 Kungsbacka, Sweden	+46 (0)300-690040
Switzerland	TriElec AG	Muehentalstrasse 136, CH-8201 Schaffhausen	+41-(0)52-6258425
Taiwan	Setuyo Enterprise Co., Ltd	5th Fl., No.105, Wu Kung 3rd, Wu-Ku Hsiang, Taipei, Taiwan, R.O.C.	+886-(0)2-2298-8889
Thailand	United Trading & Import Co., Ltd.	77/12 Bamrungmuang Road, Klong Mahanak Pomprab Bangkok Thailand	+66-223-4220-3
Tunisia	MOTRA Electric	3, Résidence Imen, Avenue des Martyrs Mourouj III, 2074 - El Mourouj III Ben Arous, Tunisia	+216-71 474 599
Turkey	Mitsubishi Electric Turkey Klima Sistemleri Üretim Anonim Şirketi	Serifali Mahallesi Kale Sokak. No:41 34775 Umraniye, Istanbul, Turkey	+90 216 969 25 00
United Kingdom	Mitsubishi Electric Europe B.V.	Travellers Lane, UK-Hatfield, Herts. ALU10 8XB, United Kingdom	+44 (0)1707-276100
Uruguay	Fierro Vignoli S.A.	Avda. Uruguay 1274 Montevideo Uruguay	+598-2-902-0808
Venezuela	Adesco S.A.	Calle 7 La Urbina Edificio Los Robles Locales C y D Planta Baja, Caracas - Venezuela	+58-212-241-9952
Vietnam	Mitsubishi Electric Vietnam Co.,Ltd. Head Office	Unit01-04, 10th Floor, Vincom Center, 72 Le Thanh Ton Street, District 1, Ho Chi Minh City, Vietnam	+84-8-3910-5945
	Mitsubishi Electric Vietnam Co.,Ltd. Hanoi Branch	6th Floor, Detech Tower, 8 Ton That Thuyet Street, My Dinh 2 Ward, Nam Tu Liem District, Hanoi City, Vietnam	+84-4-3937-8075

YOUR SOLUTION PARTNER

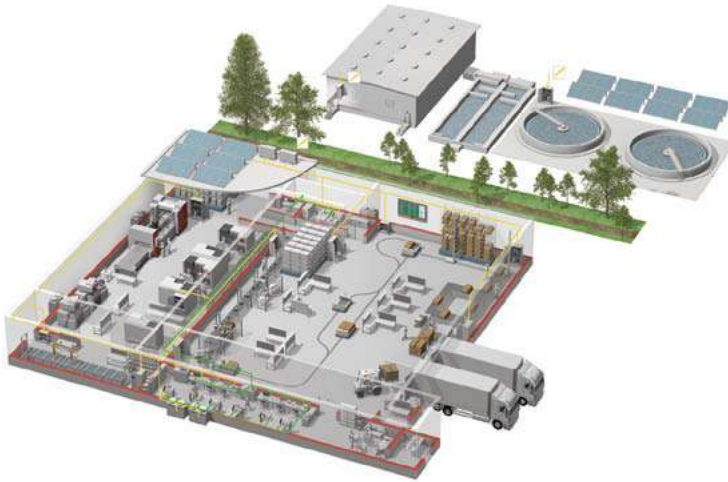

Mitsubishi Electric offers a wide range of automation equipment from PLCs and HMIs to CNC and EDM machines.

A NAME TO TRUST

Since its beginnings in 1870, some 45 companies use the Mitsubishi name, covering a spectrum of finance, commerce and industry.

The Mitsubishi brand name is recognized around the world as a symbol of premium quality.

Mitsubishi Electric Corporation is active in space development, transportation, semi-conductors, energy systems, communications and information processing, audio visual equipment and home electronics, building and energy management and automation systems, and has 237 factories and laboratories worldwide in over 121 countries.

This is why you can rely on Mitsubishi Electric automation solution - because we know first hand about the need for reliable, efficient, easy-to-use automation and control in our own factories.

As one of the world's leading companies with a global turnover of over 4 trillion Yen (over \$40 billion), employing over 100,000 people, Mitsubishi Electric has the resource and the commitment to deliver the ultimate in service and support as well as the best products.



Low voltage: MCCB, MCB, ACB



Medium voltage: VCB, VCC



Power monitoring, energy management



Compact and Modular Controllers



Inverters, Servos and Motors



Visualisation: HMIs



Numerical Control (NC)



Robots: SCARA, Articulated arm



Processing machines: EDM, Lasers, IDS



Transformers, Air conditioning, Photovoltaic systems

* Not all products are available in all countries.

Precautions Before Use

- Please consult with a Mitsubishi Electric representative when considering the application of products presented in this catalogue with machinery or systems designed for specialized use such as nuclear power, electrical power, aerospace/outer space, medical, or passenger transportation vehicles.
- Mitsubishi Electric Corporation shall not be liable, to the customer or equipment user, for:
 - 1) Any damage found not to be attributable to a Mitsubishi Electric product.
 - 2) The loss of opportunity or profits for the customer or user caused by any fault in a Mitsubishi Electric product.
 - 3) Damage, secondary damage or accident compensation resulting from special factors regardless of whether or not such factors could be predicted by Mitsubishi Electric.
 - 4) Damage to products of other companies and/or guarantees relating to other services.

For Safety : Please read the instruction manual carefully before using the products in this catalog.
Wiring and connection must be done by the person who has specialized knowledge of electric construction and wirings.

●Trademarks

- Of this product, export (or service trade) permission under this law is required for exports that fall under the safety and trade control related cargo (or service) specified in the Foreign Exchange and Foreign Trade Control Law.
- Windows® is registered trademark in the U.S. of U.S. Microsoft Corporation, and other countries.
- MODBUS® is registered trademark of Schneider USA Inc.
- Other company names and product names in this document are trademarks or registered trademarks of their respective owners.



for a greener tomorrow

Eco Changes is the Mitsubishi Electric Group's environmental statement, and expresses the Group's stance on environmental management. Through a wide range of businesses, we are helping contribute to the realization of a sustainable society.



MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BUILDING, 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN